

P1500W2 Series Air Dryers



User's Guide

Models covered:

P1500W2

P1500W2LP

P1502W2

P1502W2LP



1. Welcome & Congratulations

Congratulations on your purchase of a new PUREGAS P1500W2 Series Air Dryer! We here at PUREGAS are very proud of our products and we are committed to providing you with the best value and service possible.

We are sure that you will be satisfied with your new air dryer and would like to thank you for choosing PUREGAS for your air dryer requirements. We also hope that you will continue to choose us for your future air pressure and related product purchases.

For information about this and other PUREGAS products, please visit us on the web at:

www.puregas.com

2. Introduction

PLEASE READ THIS USER'S GUIDE THOROUGHLY AND SAVE FOR FUTURE REFERENCE.

This User's Guide is provided for the benefit of our customers and contains information and direction specific to the PUREGAS P1500W2 Series Air Dryers. Models covered include P1500W2, P1500W2LP, P1502W2 and P1502W2LP. This guide covers topics including: safety, specifications, installation, registration, operation, testing, maintenance, replacement parts, service, and troubleshooting issues. Observation and compliance with this User's Guide will ensure the maximum life and efficiency of your air dryer.

This User's Guide should be read thoroughly prior to installing, operating, or servicing the air dryer in order to become familiar with the recommended procedures. This will minimize the possibility of personal injury or damage to the unit due to improper operation or handling.

3. Table of Contents

1. Welcome & Congratulations	3		
2. Introduction	3		
3. Table of Contents.....	4		
4. Safety & Warning Information	6		
5. Overview & Specifications.....	9		
5.1 Product Description	9		
5.2 Key Features	9		
5.3 P1500W2 Series Air Dryer Models	9		
5.4 Technical Specifications	10		
5.5 Dryer Function Overview	11		
6. Installing Your Dryer	12		
6.1 Safety & Warning Information	12		
6.2 Before You Begin	13		
6.3 Included Contents	14		
6.4 Required Tools and Materials.....	14		
6.5 Installation Steps.....	15		
6.6 Installation Checklist	22		
7. Registering Your Dryer	23		
8. Operating Your Dryer	24		
8.1 Safety & Warning Information	24		
8.2 Connecting Air Supply Line to the Dryer.	25		
8.3 Powering the Dryer ON & OFF.....	26		
8.4 Using the Front Panel Display	27		
8.5 Identifying Dryer Alarms	29		
8.6 Adjusting & Resetting Dryer Set Points ...	31		
8.7 Open Front Panel	39		
8.8 Depressurizing the Dryer.....	39		
8.9 Setting the System Pressure.....	40		
8.10 Setting the Static Pressure	40		
8.11 Setting the Outlet Pressure.....	41		
8.12 Connecting to Common Alarm Terminals	42		
8.13 Connecting to Power Fail Alarm Terminals	43		
8.14 Connecting via Web Browser	44		
8.15 Using the Status Screen	46		
8.16 Using the Config Screen	49		
8.17 Using the Event Screen.....	52		
8.18 Using the Alarm Screen.....	53		
8.19 Using the Firmware Screen.....	54		
8.20 Connecting via SNMP	56		
9. Testing Your Dryer	57		
9.1 Safety & Warning Information	57		
9.2 Measuring Compressor Amp Draw	58		
9.3 Measuring Compressor Voltage	59		
9.4 Measuring Incoming Voltage	60		
9.5 Measuring Voltages at Solid State Relay..	61		
9.6 Testing Consistent Heatless Dryer Cycling.....	63		
9.7 Testing Unloader Valve	65		
9.8 Measuring Heatless Dryer Solenoid Voltage.....	66		
9.9 Testing Air Dryer Fan.....	67		
9.10 Testing Safety Relief Valve	67		
9.11 Testing Compressor ON/OFF Cycling ...	68		
9.12 Testing High Duty Cycle Alarm	69		
9.13 Testing Humidity Alarm and System Shutdown	70		
9.14 Testing High Outlet Pressure Alarm.....	72		
9.15 Testing Low Outlet Pressure Alarm	73		
9.16 Testing Air Fittings & Hoses for Leaks ..	74		
10. Maintaining Your Dryer	75		
10.1 Safety & Warning Information	75		
10.2 Six Month Maintenance.....	77		

10.3 8,000 Hour Maintenance	78	13.13 Inconsistent Heatless Dryer Cycling.....	91
11. Replacement Parts & Accessories	79	13.14 Compressor Doesn't Operate	91
11.1 Dryer Parts	79	13.15 Compressor Won't Build Pressure.....	92
11.2 Dryer Parts cont.	80	13.16 Compressor Excessive AMP Draw.....	92
11.3 Heatless Dryer Assembly Parts.....	81	13.17 High Duty Cycle Alarm	93
11.4 Accessories for Your Dryer	82	13.18 Can't Create a High Duty Cycle Alarm	93
11.5 Ordering Parts from PUREGAS	83	13.19 Compressor Rapid ON/OFF Cycling	94
12. Service & Repair.....	84	13.20 Contacting PUREGAS Technical Support.....	94
12.1 Services Offered	84	14. Appendix	95
12.2 Initiating a Service Transaction	84	14.1 Wiring Diagram	95
13. Troubleshooting Your Dryer	85	14.2 Set Point Limits and Defaults	96
13.1 Before You Call PUREGAS.....	85	14.3 SNMP Parameters.....	97
13.2 Safety & Warning Information	85	15. Limited Warranty Agreement.....	98
13.3 Air Dryer Won't Power ON	86	Registration Reminder	98
13.4 Display Screen Not Functioning.....	87	16. Contacting PUREGAS	99
13.5 High Outlet Pressure Alarm.....	87	16.1 General.....	99
13.6 Can't Create a High Pressure Alarm.....	87	16.2 Sales	99
13.7 Low Outlet Pressure Alarm	88	16.3 Service	99
13.8 Can't Create a Low Pressure Alarm	88	16.4 Technical Support.....	99
13.9 High Humidity	89	17. Notes.....	100
13.10 Can't Create a High Humidity Alarm / Shutdown	90		
13.11 High Flow Rate Alarm.....	90		
13.12 High Cabinet Temperature Alarm	90		

4. Safety & Warning Information

This section contains general information about safety and warning points to consider and adhere to during installation, operation, and maintenance of your air dryer. PLEASE READ THIS SECTION BEFORE PERFORMING ANY OPERATION OR PROCEDURE ON YOUR AIR DRYER.

Additional warnings specific to an operation or procedure will also be presented throughout the following sections. These will include the ⚠ symbol as well as a label of “**WARNING!**”, “**CAUTION!**”, or “**IMPORTANT!**”. Please be sure to pay close attention for these warnings and read them as you encounter them.



WARNING!

For your safety, all the information in this User's Guide must be followed to minimize the risk of electrical shock, and prevent property damage or personal injury.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

High Noise. PUREGAS air dryers are meant to be installed in an unattended area.

**CAUTION!**

Proper Installation & Maintenance as outlined in this User's Guide is extremely important to ensure the reliability and longevity of the equipment as well as prevent damage or personal injury.

**CAUTION!**

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air dryer first, or **damage to the Control Board will occur.**

**CAUTION!**

Incoming power to dryer must be:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/60 Hz for P1500W2 & P1500W2LP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W2 & P1502W2LP models

**IMPORTANT!**

Performing routine maintenance as outlined in the *Maintaining Your Dryer* section will ensure optimal performance over the lifecycle of your air dryer.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

**CAUTION!**

This Air Dryer does not contain an internal Surge Protection Device (SPD). If an SPD is required it must be supplied by the user.

**CAUTION!**

Observe precautions for handling **Electrostatic Sensitive Devices**.

**IMPORTANT!**

Installation of PUREGAS air dryers are intended for network telecommunication facilities (non-customer premises) only.

5. Overview & Specifications

5.1 Product Description

The P1500W2 Series Air Dryers from PUREGAS are designed to intake wet ambient air and remove the moisture for delivery to applications requiring a constant, on-demand source of dry, pressurized air. This process is fully automatic and will remain consistent with minimal required periodic maintenance. These dryers are designed specifically for indoor use.

The P1500W2 Series Air Dryers employ a fully digital operating platform offering the most accurate readings of dryer variables, removable access panel allowing easier access for adjustment and maintenance, and ultra quiet compressor with an industry leading maintenance interval of 8,000 hours.

5.2 Key Features

- LCD display of all operating parameters
- Solid state microprocessor-based circuitry eliminates costly maintenance
- Accurate humidity sensing within $\pm 0.1\%$ RH
- Quietest dryer on the market - less than 50 dBA
- Oil-less compressors with 8,000 hour maintenance interval


5.3 P1500W2 Series Air Dryer Models

Model	Description
P1500W2	110 - 125 VAC, Standard Pressure 13.8 – 103.4 KPa
P1500W2LP	110 - 125 VAC, Low Pressure 2.07 – 51.71 KPa
P1502W2	208 - 230 VAC, Standard Pressure 13.8 – 103.4 KPa
P1502W2LP	208 - 230 VAC, Low Pressure 2.07 – 51.71 KPa

5.4 Technical Specifications

	P1500W2	P1500W2LP	P1502W2	P1502W2LP
Output Capacity	Normal: Up to 34 SCMD continuous Maximum: 42.5 SCMD emergency			
Power Requirements	110 - 125 VAC, 50/60 Hz, 7.0 Amps		208 – 230 VAC, 1 Phase, 50/60 Hz, 3.5 Amps	
Outlet Pressure Range	13.8 – 103.4 KPa	2.07 – 51.71 KPa	13.8 – 103.4 KPa	2.07 – 51.71 KPa
Outlet Air Humidity	Less than 2% RH			
Compressor Type	Two-cylinder, 3/4 HP, oil-less type		Two-cylinder, 1/2 HP, oil-less type	
Drying Method	Heatless Desiccant			
Operating Temperature Range	5° to 30° C (optimal)			
Noise Level	48 dBA at 3 m			
Alarms	Standard alarms – complete readings of all critical measurement points, individual alarm indication display			
Outlet Connections	3/8” O.D. tube fitting			
Dimensions	30.5 cm x 43.8 cm x 68.6 cm			
Net Weight	33.6 kgs			

5.5 Dryer Function Overview

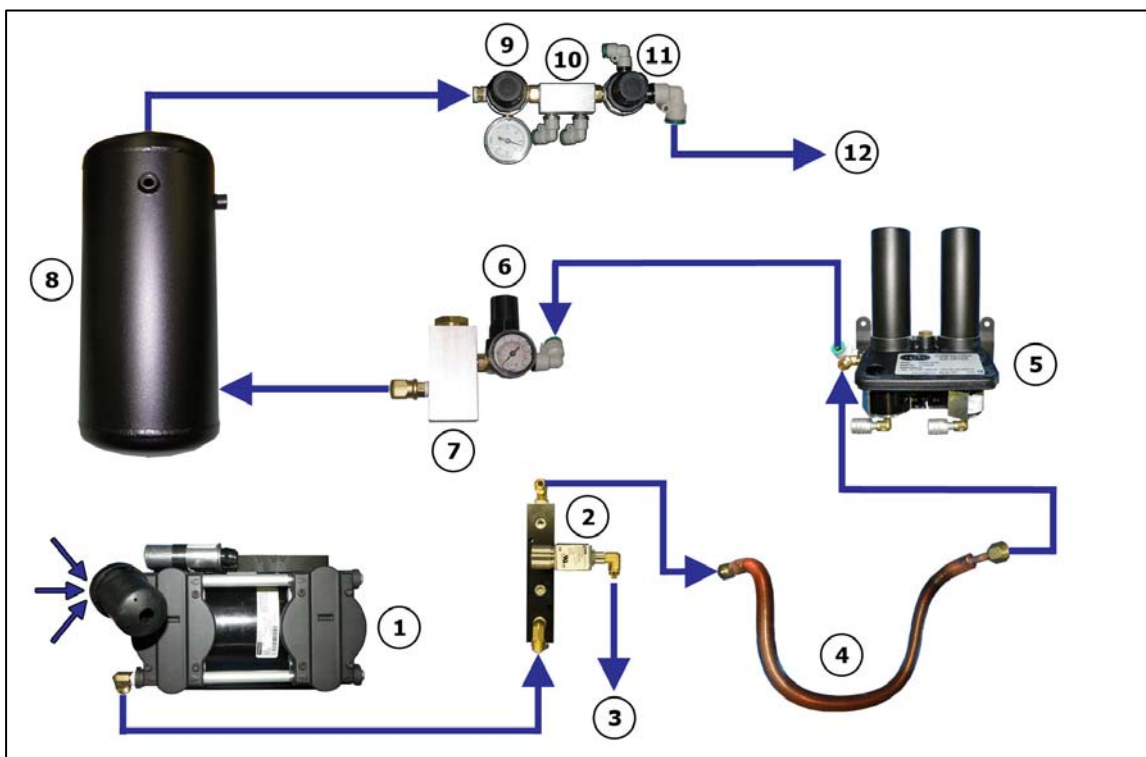

	Component	Description
1	Compressor	Compresses drawn in ambient air.
2	Unloader Valve	Relieves excess Compressor head pressure.
3	Unloader Valve Exhaust	Exhausts the air from the Unloader Valve.
4	In-Line Cooler	Cools compressed air prior to drying function.
5	Heatless Dryer	Removes moisture from compressed air.
6	Capacity Control Valve	Regulates System Pressure and prevents air from bleeding back through the Heatless Dryer.
7	Humidity Sensor	Measures the Humidity of the compressed air.
8	Air Tank	Stores dry compressed air.
9	Static Pressure Regulator	Regulates the Static Pressure 117 KPa (17 PSI). Maintains constant pressure on the Flow Block for accurate Flow measuring.
10	Flow Block	Measures the Flow Rate of compressed air.
11	Outlet Pressure Regulator	Regulates the Outlet Pressure.
12	Pressure Outlet	Outputs the pressure set by the Outlet Pressure Regulator.

6. Installing Your Dryer

6.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



CAUTION!

Proper Installation & Maintenance as outlined in this User's Guide is extremely important to ensure the reliability and longevity of the equipment as well as prevent damage or personal injury.



CAUTION!

Incoming power to dryer must be:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/60 Hz for P1500W2 & P1500W2LP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W2 & P1502W2LP models

**WARNING!**

High Noise. PUREGAS air dryers are meant to be installed in an unattended area.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

6.2 Before You Begin

6.2.1 Carefully inspect the unit, including the shipping box as well as the air dryer, for **ANY DAMAGE CAUSED BY SHIPPING**. If any shipping damage is detected, it is important to file a claim with the shipping company prior to continuing the installation procedures.

6.2.2 Read the entire *Installing Your Dryer* section to familiarize yourself with the components and procedures before performing the air dryer installation.

6.2.3 Verify the installation location of the air dryer:

6.2.3.1 Well ventilated and free from abrasive dust or chemicals.

6.2.3.2 Ambient temperature is between 5° and 30° C (optimal).

NOTE: Higher temperatures will decrease component lifespan.

6.2.3.3 Meets the following power requirements:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/50 Hz for P1500W2 & P1500W2LP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W2 & P1502W2LP models

6.2.4 Notify the alarm center of the installation and potential for alarms during the process (as necessary).

6.3 Included Contents



(1) P1500W2 Series Air Dryer

(1) Installation Guide (not shown)

Package located inside the dryer:

- (1) 120 VAC Power Cord (for P1500W & P1500WLP models)
- (1) 220 VAC Power Cord (for P1502W & P1502WLP models)
- (1) Tee Tube Union
- (1) User's Guide (not shown)
- (1) Mini CD (not shown)

6.4 Required Tools and Materials

- 9/16" wrench
- Cup of soapy water
- 1-inch paint brush (recommended)
- Box cutter

6.5 Installation Steps

- 6.5.1** Using a box cutter remove the Dryer from box and all shipping materials.

NOTE: If ANY SHIPPING DAMAGE is detected, file a claim with the shipping company prior to continuing the installation procedures.




- 6.5.2** Open front panel latches and remove the front panel.




- 6.5.3** Check for loose parts, hoses, or wiring.


NOTE: If ANY SHIPPING DAMAGE is detected, file a claim with the shipping company prior to continuing the installation procedures.

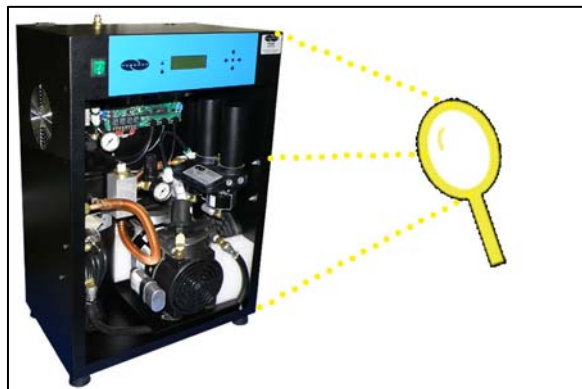

6.5.4 Remove the ship-loose contents package.

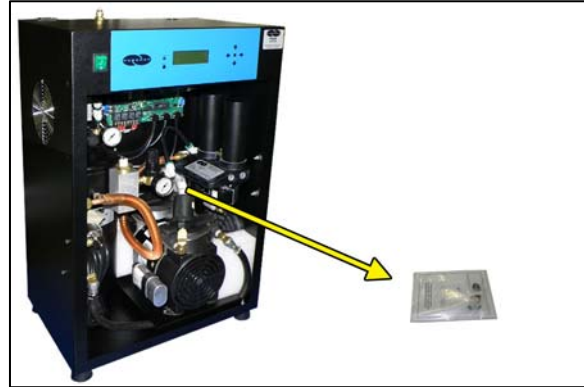


6.5.5 Remove and discard the three packing foam blocks from around the compressor.

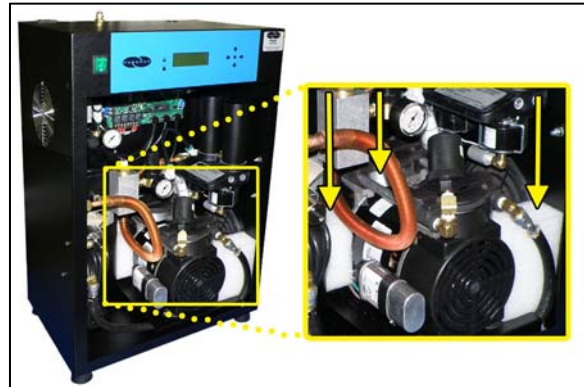

6.5.6 Place the dryer at the desired operating location:

- Place the dryer on a leveled surface
- For rack install use Universal Rack Mounting Kit P011674 (section 11.4)
- For wall install use Wall Mounting Kit P011773 (section 11.4)


6.5.7 Verify that the dryer is powered **OFF**.

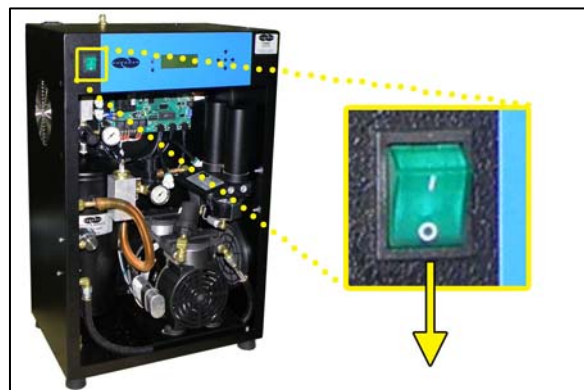

6.5.8 Plug AC Power Cord to dryer.


6.5.9 Wire or plug the power cord into:

- 110 - 125 VAC power outlet for P1500W2 & P1500W2LP models.
- 208 - 230 VAC, 1 phase, power outlet for P1502W2 & P1502W2LP models.
 - Line – Black (Brown)
 - Neutral – White (Blue)
 - Ground – Green (Green/Yellow)

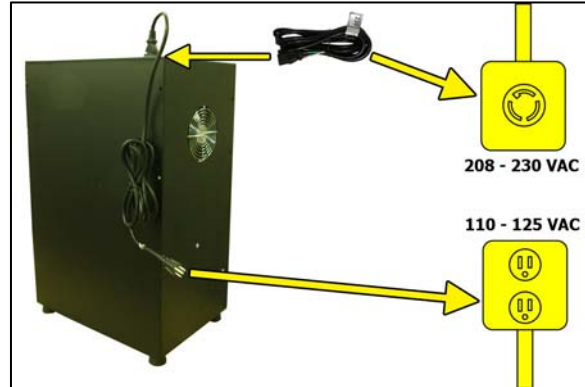

6.5.10 Power the dryer ON.


NOTE: The compressor and heatless dryer will start, creating air flow through the Outlet Port.

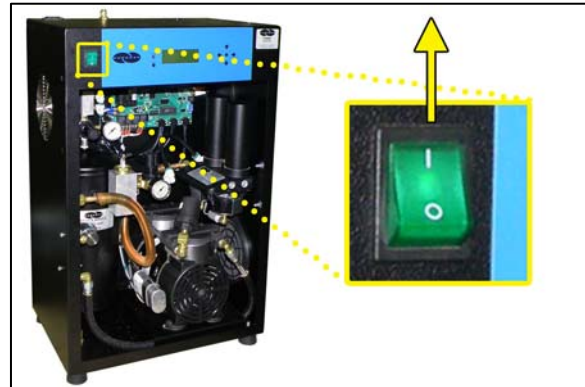

6.5.11 Set the System Pressure:


With Compressor running:

6.5.11.1 Pull the Capacity Control Valve knob out.

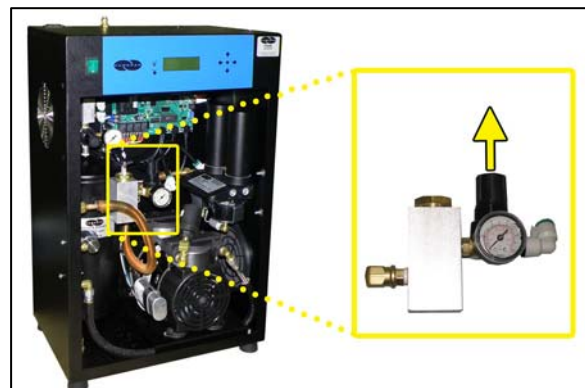


6.5.11.2 Turn the knob until the reading on the pressure gauge is **552 KPa (80 PSI)**.

6.5.11.3 Push the knob in to lock.

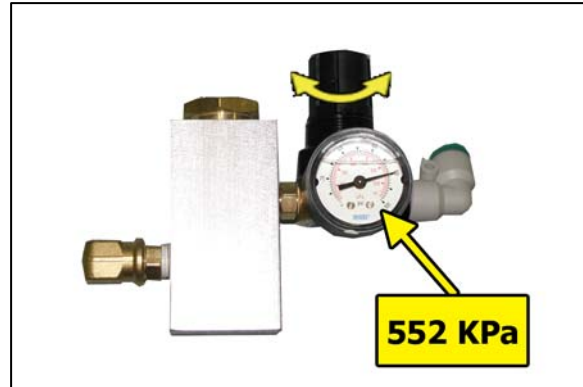


6.5.12 Let the dryer run until the Humidity drops below 2% (may take up to 15 minutes).

NOTE: Press the **RESET** Button if the dryer goes into **SHUTDOWN** mode.

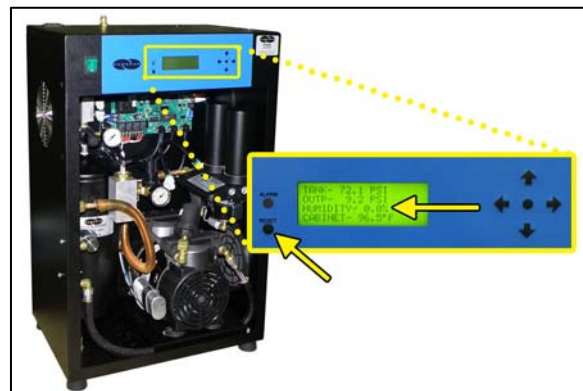


6.5.13 Power the dryer **OFF**.

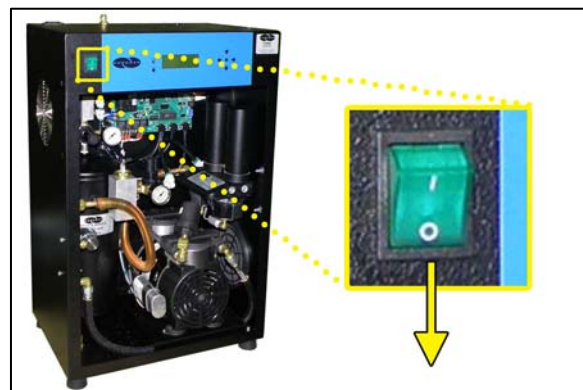


6.5.14 Remove the Precision Bleed orifice from the Outlet Port.

NOTE: Save this orifice for use in low flow applications.

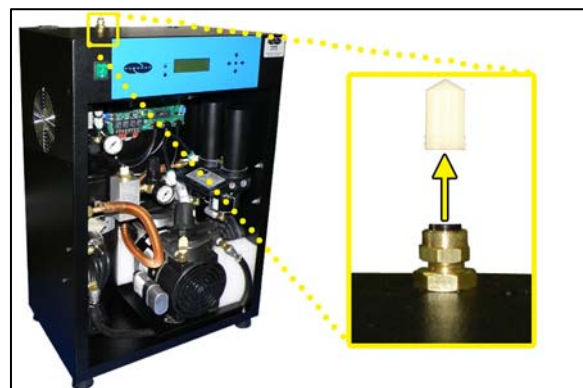


6.5.15 Connect the air supply line to the Outlet Port.

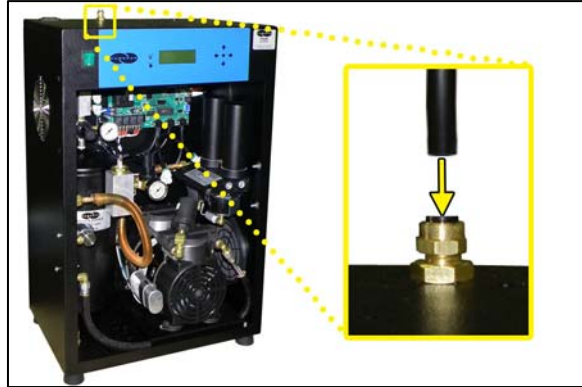


NOTE: For all dryers with minimal flow:

Install the Tee Tube Union and the Precision Bleed Orifice to maintain a constant air flow. (The orifice was removed in step 6.5.14).



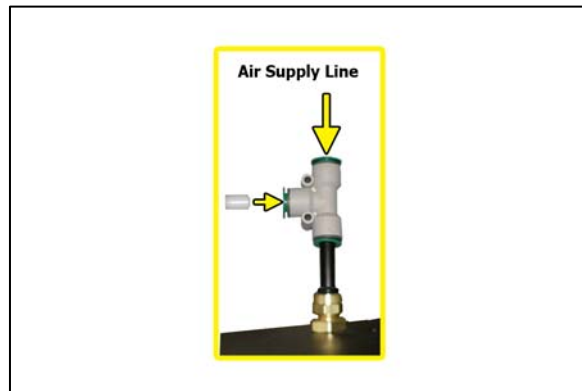


6.5.16 Power the dryer **ON**.

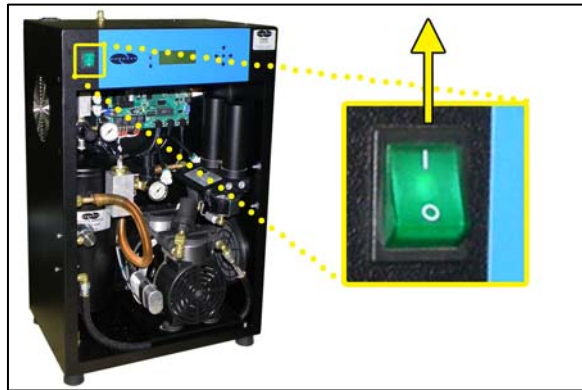


6.5.17 Set the Static Pressure:**6.5.17.1 Pull Static Pressure**

Regulator knob out.

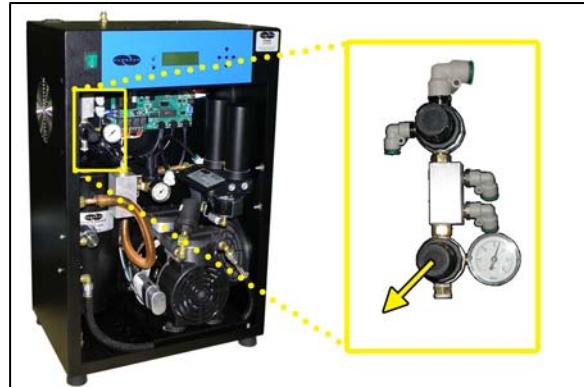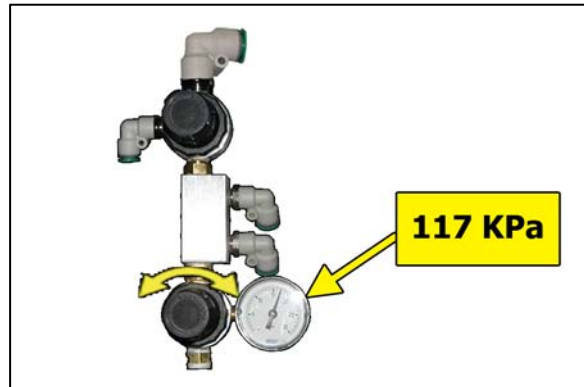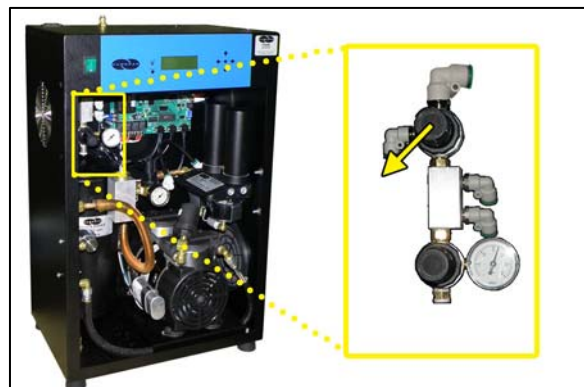**6.5.17.2 Turn knob until the reading on the pressure gauge is **117 KPa (17 PSI)**.****6.5.17.3 Push knob in to lock.****6.5.18 Set the Outlet Pressure:****6.5.18.1 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).**

6.5.18.2 Turn knob until
Outlet Pressure (**OUTP**)
reading is at the desired
setting.

6.5.18.3 Push knob in to lock
(or tighten the retaining
nut – LP Models).

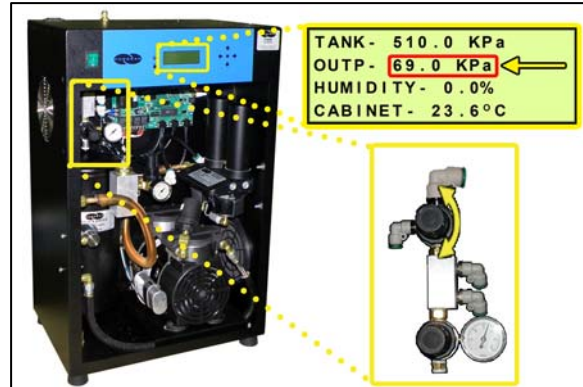

6.5.19 Check for air leaks:

NOTE: This is a general procedure that can be applied to any fitting or hose that has air pressure in it. **DO NOT SOAP TEST THE HUMIDITY SENSOR FITTING. DAMAGE TO THE SENSOR MAY OCCUR.**


With Compressor NOT running:

6.5.19.1 Listen for any 'hissing' sounds which may indicate a fitting or hose air leak.

With Compressor running:

6.5.19.2 Use a 1-inch paint
brush to dab soapy water
on the air fitting or hose
connection to be tested.

If air bubbles appear at the
connection, this indicates that
air is leaking from the
connection.

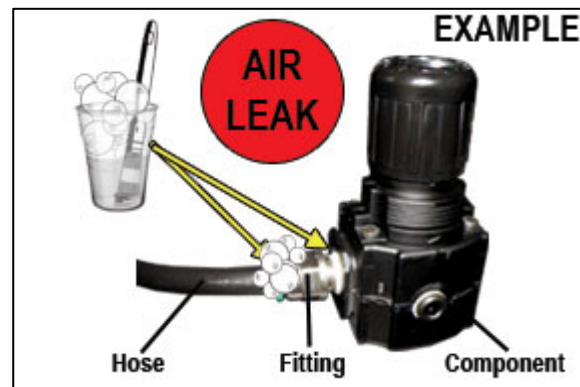

If any leaks are detected, take steps to seal them off (as necessary):

- *Tighten the fitting*
- *Re-connect loose hose*
- *Replace the fitting / hose / component*

6.5.20 Re-install the front panel.**6.5.21 REGISTER YOUR DRYER.** *See section 7. for details.***6.6 Installation Checklist**

- ☐ No shipping damage was detected.
- ☐ Dryer location meets the following requirements:
 - Well ventilated
 - Free from abrasive dust or chemicals
 - Ambient temperature is between 5° and 30° C (optimal)
- ☐ Shipping foam blocks removed from compressor.
- ☐ System Pressure is set to 552 KPa (80 PSI).
- ☐ Static Pressure is set to 117 KPa (17 PSI).
- ☐ No air leaks are present in the system.
- ☐ No alarms are present on the Display Panel.

7. Registering Your Dryer

Please take a moment to register your PUREGAS P1500W2 Series Air Dryer. Registering is necessary to activate the Limited Warranty on your product. Once you register, you are eligible to receive free technical support, as well as updates concerning your PUREGAS products.

Register Online at www.puregas.com/registration

Or by Phone 1-800-521-5351 (option 2)

Have the following information available:

Model #: _____ **Serial #:** _____

Company Name: _____ **Location Name:** _____

Shipping Address: _____

City: _____ **State:** _____ **Zip Code:** _____

Contact Name: _____ **Phone #:** () - ext. _____

Email: _____

8. Operating Your Dryer

8.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

High Noise. PUREGAS air dryers are meant to be installed in an unattended area.




IMPORTANT!

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED** AND MAY VOID THE WARRANTY.


8.2 Connecting Air Supply Line to the Dryer

8.2.1 Connect the air supply line to the Outlet Port.

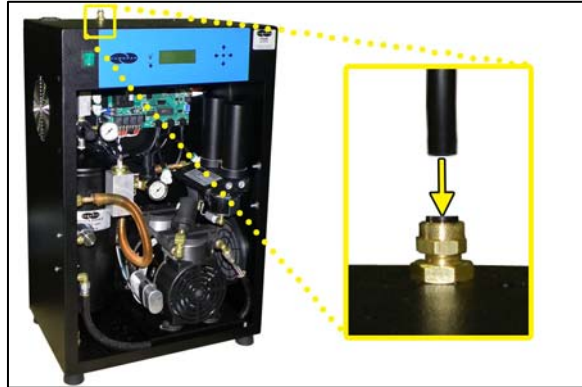

NOTE: For all dryers with minimal flow:

Install the Tee Tube Union and the Precision Bleed Orifice to maintain a constant air flow. (The orifice was removed in step 6.5.14).

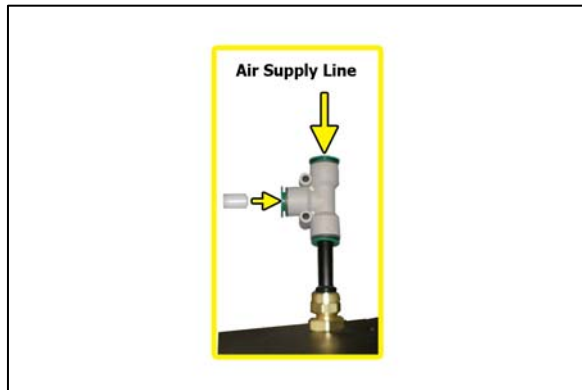

8.3 Powering the Dryer ON & OFF




CAUTION!

Incoming power to dryer must be:

- 15 amp service recommended
- 10 amp slow blow fuse
- 110 - 125 VAC, 50/60 Hz for P1500W & P1500WLP models
- 208 - 230 VAC, 50/60 Hz, 1 Phase for P1502W & P1502WLP models

8.3.1 POWER Switch - Controls the main power to the dryer.

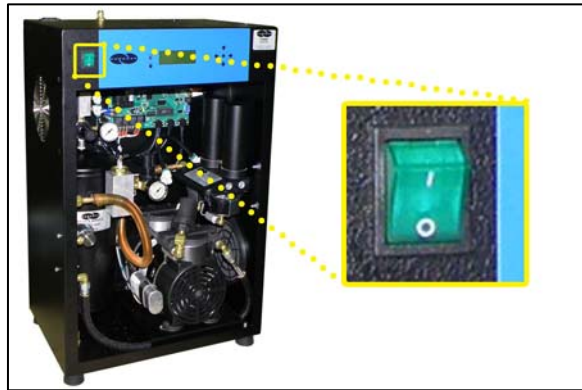


8.4 Using the Front Panel Display



CAUTION!

The Display Screen is covered by a clear protective layer that guards against Electrostatic Discharge (ESD). DO NOT REMOVE THIS LAYER.

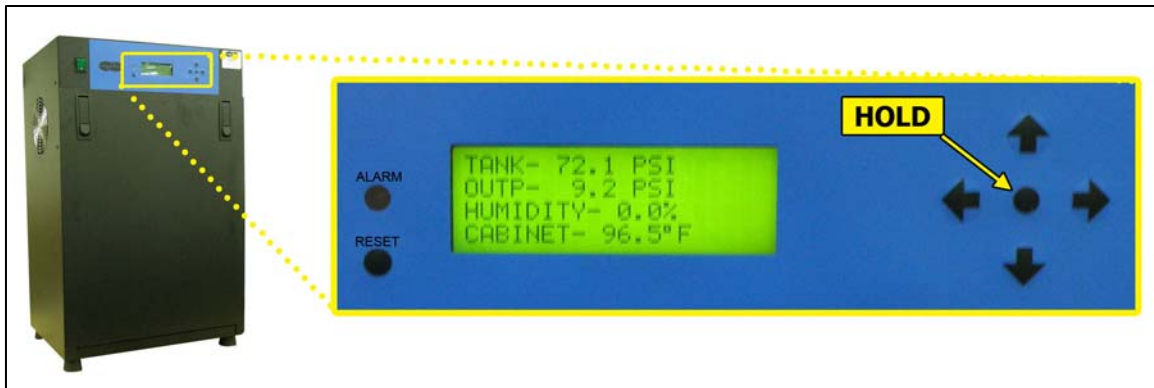

8.4.1 ALARM LED – Indicates an alarm is present.

8.4.2 RESET Button – Clears an alarm and allows the system to continue operating.

8.4.3 HOLD Button – Freezes the current information screen on the display. When pressed again, it will allow the information screens to begin cycling again.

8.4.4 Arrow Buttons – Used to access, navigate, and change values in the Set Point Adjust screens.

8.4.5 Display Screen - Shows the current dryer readings. Will cycle between the following information screens (unless the **HOLD** button has been pressed):

8.4.5.1 Tank Screen



TANK - 510.0 KPa
OUTP - 69.0 KPa
HUMIDITY - 0.0%
CABINET - 23.6 °C


TANK – Air Tank pressure - fluctuates between 345 – 620 KPa

OUTP – Outlet Pressure regulated by the Outlet Pressure Regulator

HUMIDITY – Humidity level of the system

CABINET – Temperature of the dryer cabinet compartment

8.4.5.2 System Stat Screen

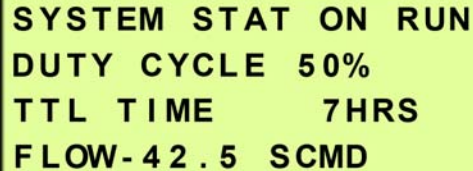

SYSTEM STAT ON RUN
DUTY CYCLE 50%
TTL TIME 7HRS
FLOW - 42.5 SCMD

SYSTEM STAT - Running Status of the system:

- **ON RUN** – System is Online
- **SHUTDOWN** – System has been shutdown as a result of either a Humidity or High Cabinet Temperature alarm

DUTY CYCLE – The percentage of time the compressor is ON versus time it is OFF during the Tank pressurization cycle.

TTL TIME – How many hours the compressor has run since startup or the last time the Total Time counter was reset.

FLOW – Air Flow Rate

8.5 Identifying Dryer Alarms

8.5.1 High Outlet Pressure Alarm -

Occurs when the Outlet Pressure (**OUTP**) rises above the alarm set point for more than one (1) minute.

TANK -	510.0	KPa	
OUTP -	86.2	KPa	HALR
HUMIDITY -	0.0%		
CABINET -	23.6	°C	

(Default setting is 83.0 KPa for Standard models / 51.71 KPa for LP models)

See section 13.5 for troubleshooting information.

8.5.2 Low Outlet Pressure Alarm –

Occurs when the Outlet Pressure (**OUTP**) drops below the alarm set point for more than one (1) minute.

TANK -	510.0	KPa	
OUTP -	41.4	KPa	LALR
HUMIDITY -	0.0%		
CABINET -	23.6	°C	

(Default setting is 45.0 KPa for Standard models / 2.07 KPa for LP models)

See section 13.7 for troubleshooting information.

8.5.3 High Humidity Alarm –

Occurs when the Humidity level rises above the alarm set point for more than one (1) minute.
(Default setting is 10.0%)

TANK -	510.0	KPa	
OUTP -	69.0	KPa	
HUMIDITY -	10.5%		ALR
CABINET -	23.6	°C	

If this alarm is present for one (1) minute or more, the air dryer will go into **SHUTDOWN** mode to prevent saturated air from being delivered to the supply line.

SYSTEM STAT	SHUTDOWN
DUTY CYCLE	41.6%
TTL TIME	7HRS
FLOW-	8.97 SCMD

See section 13.9 for troubleshooting information.

8.5.4 High Cabinet Temperature Alarm -

Occurs when the temperature in the cabinet rises above 49°C for more than ten (10) seconds.

TANK - 510.0 KPa
OUTP - 69.0 KPa
HUMIDITY - 0.0%
CABINET - 63.6 °C ALR

If this alarm is present for three (3) minutes or more, the Compressor will **SHUTDOWN** to protect against damage due to overheating. Once the temperature lowers to 45°C the Compressor will re-start.

See section 13.12 for troubleshooting information.

8.5.5 High Duty Cycle Alarm –

Occurs when the Duty Cycle rises above the alarm set point for more than one (1) minute.
(Default setting is 70%)

SYSTEM STAT ON RUN
DUTY CYCLE 51.6% ALR
TTL TIME 7HRS
FLOW- 8.97 SCMD

See section 13.17 for troubleshooting information.

8.5.6 Total Time Alarm –

Occurs when the compressor has reached an 8,000 hour maintenance interval. Perform the required maintenance.

SYSTEM STAT ON RUN
DUTY CYCLE 41.6%
TTL TIME 8007HRS ALR
FLOW- 8.97 SCMD

See section 10.3 for maintenance information.

8.5.7 High Flow Rate Alarm –

Occurs when the Flow Rate rises above the alarm set point for more than one (1) minute.
(Default setting is 42 SCMD)

SYSTEM STAT ON RUN
DUTY CYCLE 41.6%
TTL TIME 7HRS
FLOW- 42.4 SCMD ALR

See section 13.11 for troubleshooting information.

8.6 Adjusting & Resetting Dryer Set Points

Dryer Set Points are simply limits programmed for a specific reading. Once this limit is reached (or exceeded) this results in an alarm for that reading. Each of these set points is factory programmed with a default value based on typical usage of the air dryer. Many of the set points for dryer alarms can be modified to levels more closely based upon your specific application.


NOTE: Reference Appendix Section 14.2 for Limits, Defaults, and Formats.

- Press the Up (↑) Arrow Button to access the Set Point Adjust screens.
- Press the Up (↑) & Down (↓) Arrow Buttons to navigate through the available Set Point Adjust screens.
- To change a specific Set Point:

8.6.1 High Flow Rate Alarm Set Point (default setting is 42.0 SCMD) –


8.6.1.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

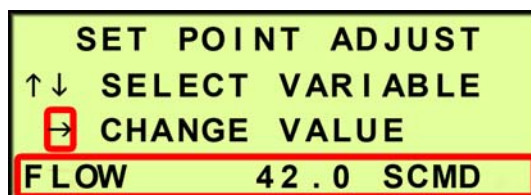

8.6.1.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

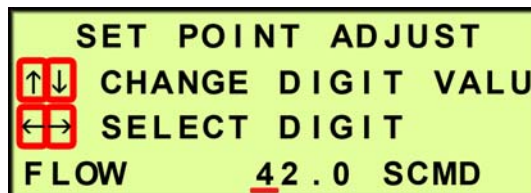


8.6.1.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.6.1.4 Press the Right (→) Arrow Button until the underscore disappears.

8.6.1.5 Press the Right (→) Arrow Button until the underscore appears under the correct setting (YES or NO).

8.6.1.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

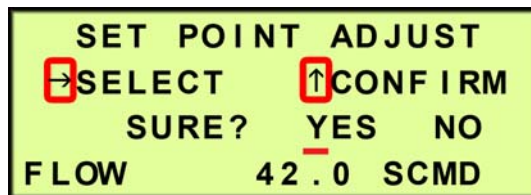


8.6.2 High Outlet Pressure Alarm Set Point

(Default setting is 83.0 KPa for Standard models / 51.71 KPa for LP models) –


8.6.2.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

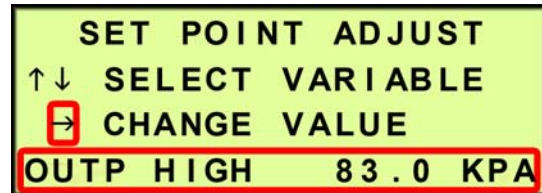

8.6.2.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

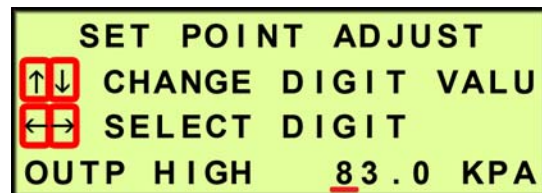


8.6.2.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.6.2.4 Press the Right (→) Arrow Button until the underscore disappears.

8.6.2.5 Press the Right (→) Arrow Button until the

underscore appears under the correct setting (YES or NO).

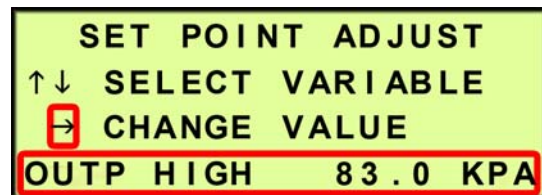


8.6.2.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.6.3 Low Outlet Pressure Alarm Set Point

(Default setting is 45.0 KPa for Standard models / 2.07 KPa for LP models) –


8.6.3.1 Press the Right (→) Arrow Button

to access the Change Value Screen.

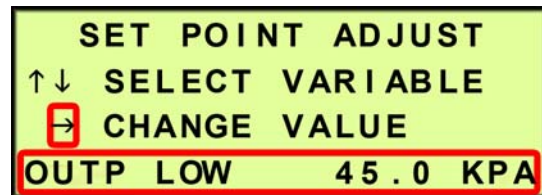

8.6.3.2 Press the Right (→) & Left (←) Arrow Buttons

to move the underscore beneath the digit to change.

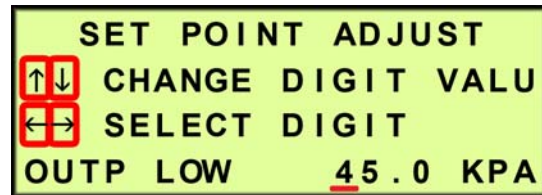

8.6.3.3 Press the Up (↑) & Down (↓) Arrow Buttons


to change the value of the selected digit.

8.6.3.4 Press the Right (→) Arrow Button

until the underscore disappears.

8.6.3.5 Press the Right (→) Arrow Button

until the underscore appears under the correct setting (YES or NO).

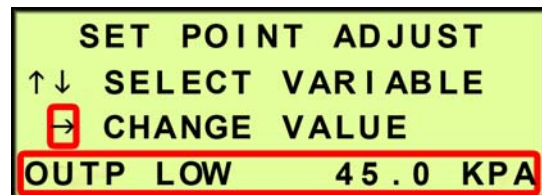


8.6.3.6 Press the Up (↑) Arrow

to confirm. This will lock in the new setting value.

8.6.4 High Humidity Alarm Set Point (default setting is 10.0%) –


8.6.4.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

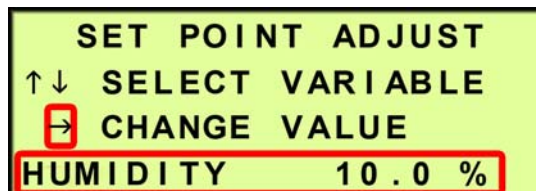

8.6.4.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

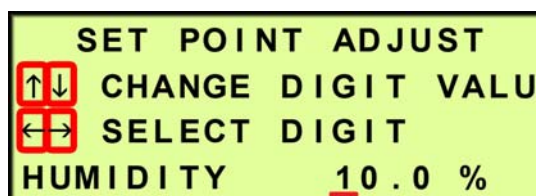


8.6.4.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.6.4.4 Press the Right (→) Arrow Button until the underscore disappears.

8.6.4.5 Press the Right (→) Arrow Button until the

underscore appears under the correct setting (YES or NO).

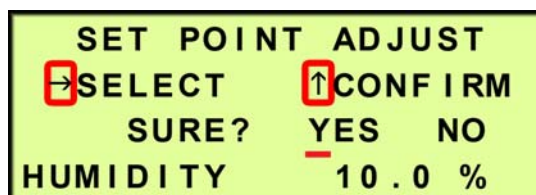


8.6.4.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.6.5 High Duty Cycle Alarm Set Point (default setting is 70.0%) –


8.6.5.1 Press the Right (→)

Arrow Button to access the Change Value Screen.

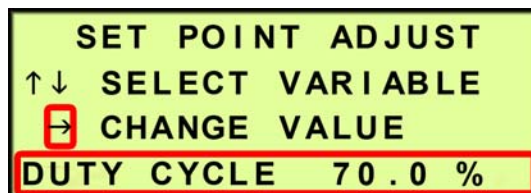

8.6.5.2 Press the Right (→) &

Left (←) Arrow Buttons to move the underscore beneath the digit to change.

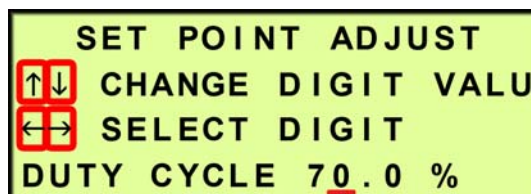


8.6.5.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.6.5.4 Press the Right (→) Arrow Button until the underscore disappears.

8.6.5.5 Press the Right (→)

Arrow Button until the underscore appears under the correct setting (YES or NO).

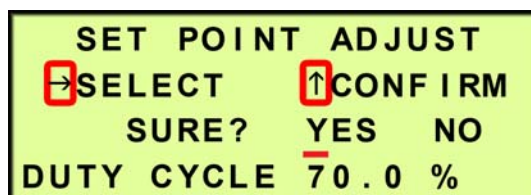

8.6.5.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.


8.6.6 Compressor Total Time Reset –

The Total Time (**TTL TIME**) is the time the compressor runs measured in hours since startup or the last time the compressor time counter was reset.

The dryer will display an alarm when this counter has reached 8,000 hours, signaling is it time for maintenance.


8.6.6.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

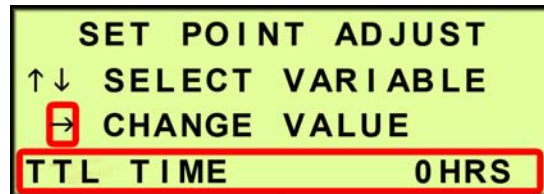

8.6.6.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digits to change to zero (0).

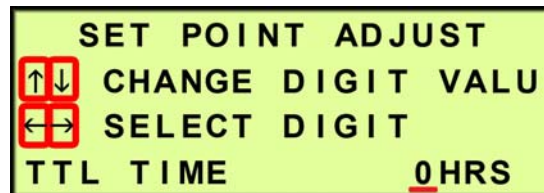


8.6.6.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.6.6.4 Press the Right (→) Arrow Button until the confirmation screen appears.

8.6.6.5 Press the Right (→) Arrow Button until the


underscore appears under the correct setting (**YES** or **NO**).

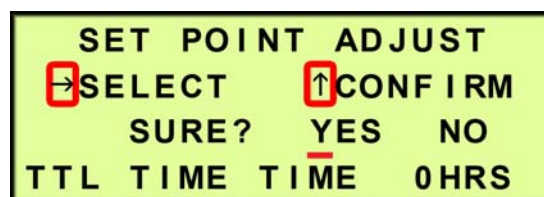


8.6.6.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.6.7 Reset to Factory Values –

8.6.7.1 Press the Left (←) & Right (→) Arrow Buttons at the same time.

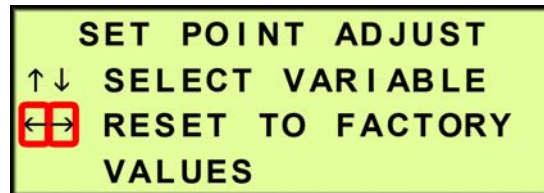

8.6.7.2 Press the Right (→) Arrow Button until the underscore appears under the correct setting (YES or NO).

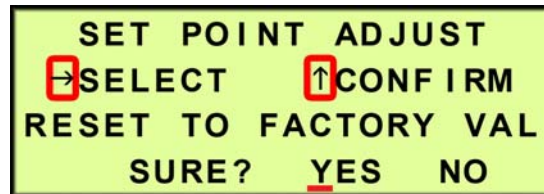

8.6.7.3 Press the Up (↑) Arrow to confirm. This will lock in the factory default values.


8.6.8 Alarm Delays Set Point -

The Alarm Delay allows the dryer to come out of the alarm condition on its own without signaling an alarm.


ON (default) – waits one (1) minute before signaling alarms

OFF – signals alarms immediately

8.6.8.1 Press the Right (→) Arrow Button to change the value.

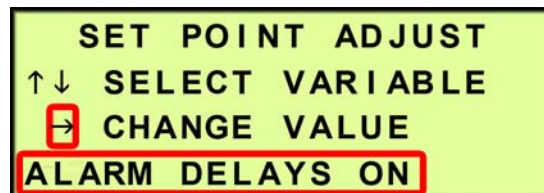

8.6.8.2 Press the Right (→) Arrow Button until the underscore appears under the correct setting (OFF or ON).

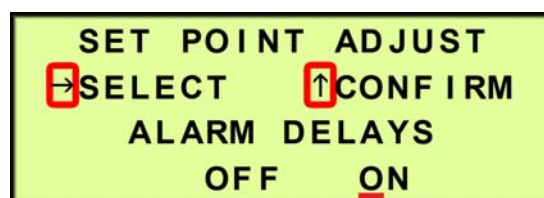


8.6.8.3 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.6.9 Startup Delay Set Point (default setting is 0 sec) –

The Startup Delay keeps the compressor from turning on immediately when the dryer is powered on for up to 10 seconds. This allows multiple dryers to power on in separate intervals in case of a power loss.


8.6.9.1 Press the Right (→) Arrow Button to access the

Change Value Screen.

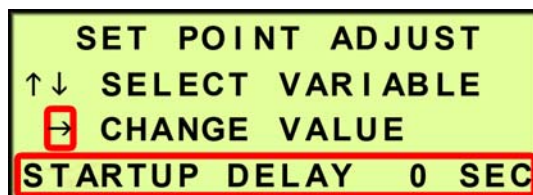

8.6.9.2 Press the Right (→) & Left (←) Arrow Buttons to

move the underscore beneath the digit to change.

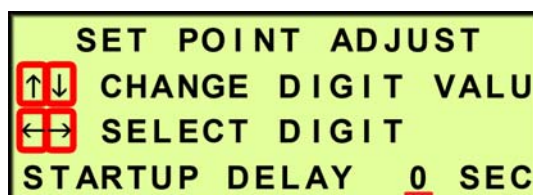


8.6.9.3 Press the Up (↑) & Down (↓) Arrow Buttons to change the value of the selected digit.

8.6.9.4 Press the Right (→) Arrow Button until the underscore disappears.

8.6.9.5 Press the Right (→) Arrow Button until the


underscore appears under the correct setting (YES or NO).

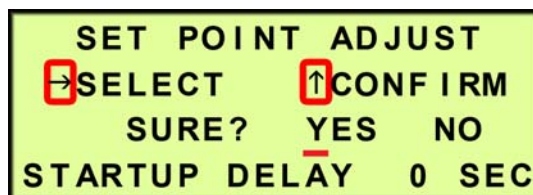

8.6.9.6 Press the Up (↑) Arrow to confirm. This will lock in the new setting value.

8.6.10 Pressure Gauge –

This is an information screen only and will not time-out, returning to the cycling information screens. It also masks air dryer alarms while in use. This screen can be used during air dryer troubleshooting.

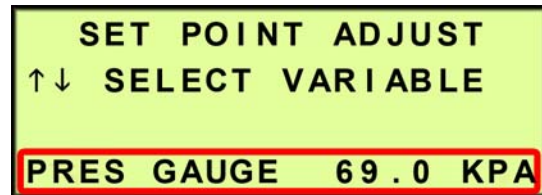

8.7 Open Front Panel

8.7.1 Open front panel latches and remove the front panel.




8.8 Depressurizing the Dryer

8.8.1 Open front panel (section 8.7).

8.8.2 Pull the ring handle on the Safety Relief Valve until all the air pressure is released.

8.8.3 To prevent pressure from building back up, power the dryer **OFF** (*See section 8.3 for detail*).

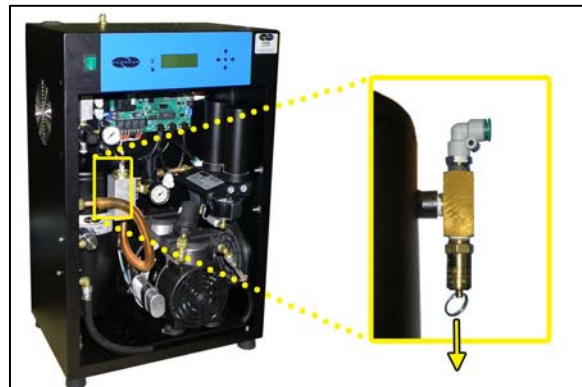


8.8.4 Close front panel.

8.9 Setting the System Pressure

With Compressor running:

8.9.1 Open front panel (section 8.7).


8.9.2 Pull the Capacity Control Valve knob out.

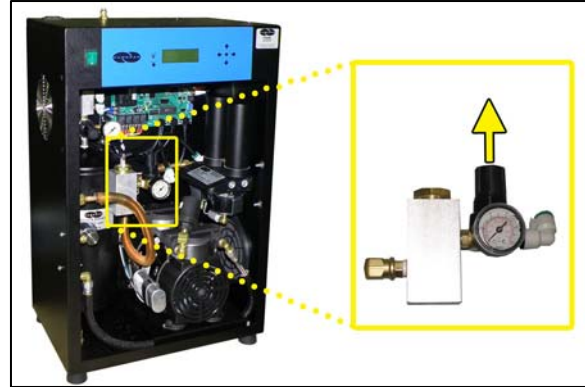

8.9.3 Turn the knob until the reading on the Pressure Gauge is **552 KPa (80 PSI)**.

8.9.4 Push the knob in to lock.


8.9.5 Close front panel.

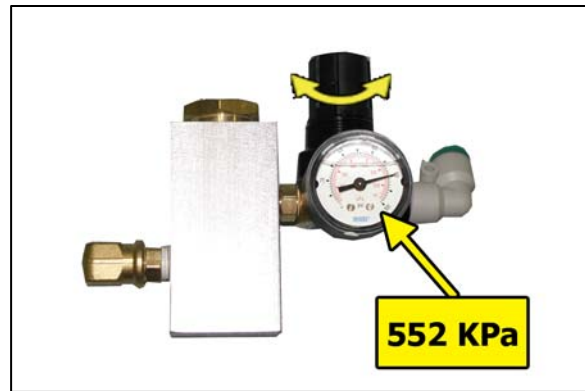

8.10 Setting the Static Pressure

8.10.1 Open front panel (section 8.7).


8.10.2 Pull the Static Pressure Regulator knob out.

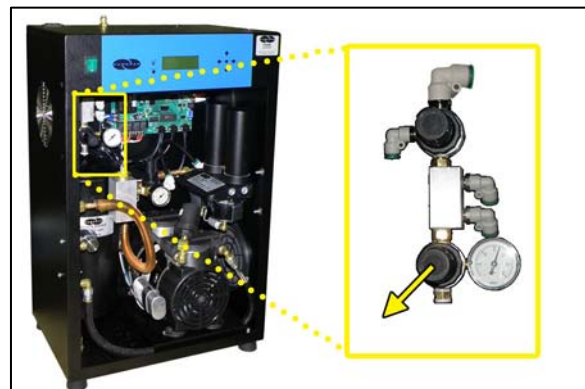

- 8.10.3** Turn knob until the reading on the Pressure Gauge is **117 KPa (17PSI)**.

- 8.10.4** Push knob in to lock.


- 8.10.5** Close front panel.

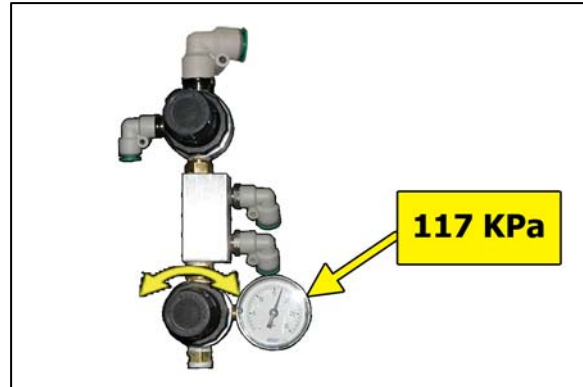

8.11 Setting the Outlet Pressure


- 8.11.1** Open front panel (section 8.7).

- 8.11.2** Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).

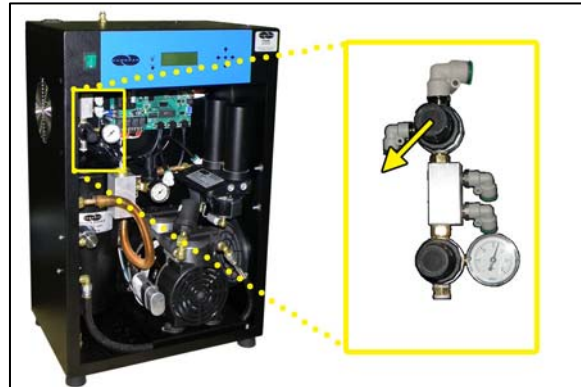

- 8.11.3** Turn knob until Outlet Pressure (**OUTP**) reading is at the desired setting.

- 8.11.4** Push knob in to lock (or tighten the retaining nut – LP Models).

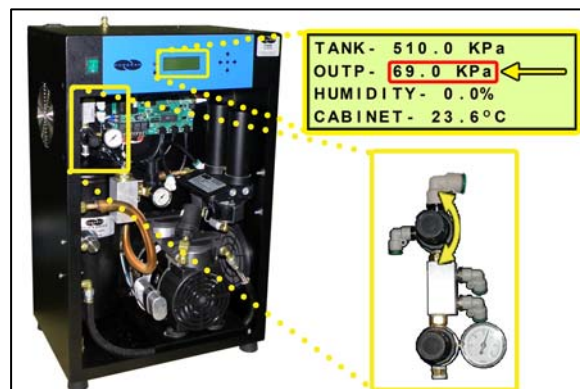


- 8.11.5** Close front panel.

8.12 Connecting to Common Alarm Terminals


8.12.1 Open front panel (section 8.7).

8.12.2 Locate the external Common Alarm pins on the Control Board.

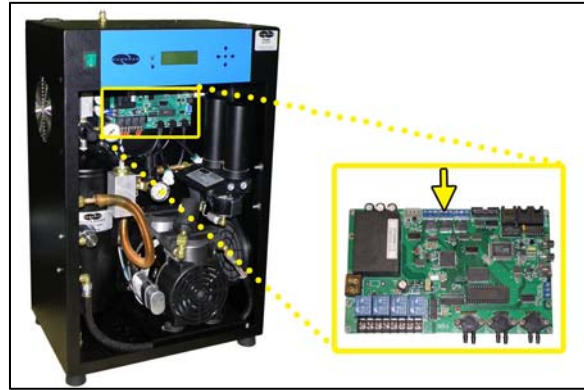

8.12.3 Wire the Common Alarm wire pair to the Control Board as required:

- **COMMON & NO** for CLOSE ON ALARM operation.
- **NC & COMMON** for OPEN ON ALARM operation.

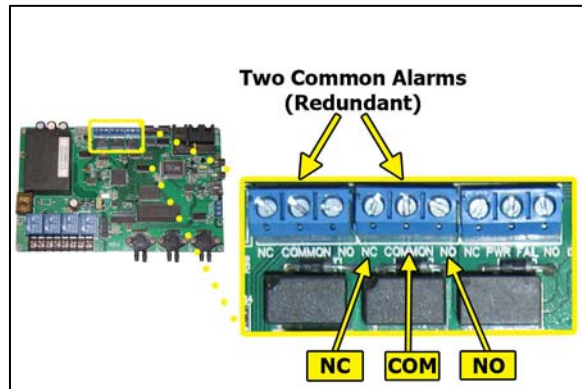


8.12.4 Close front panel.

8.13 Connecting to Power Fail Alarm Terminals


8.13.1 Open front panel (section 8.7).

8.13.2 Locate the external Power Fail pins on the Control Board.

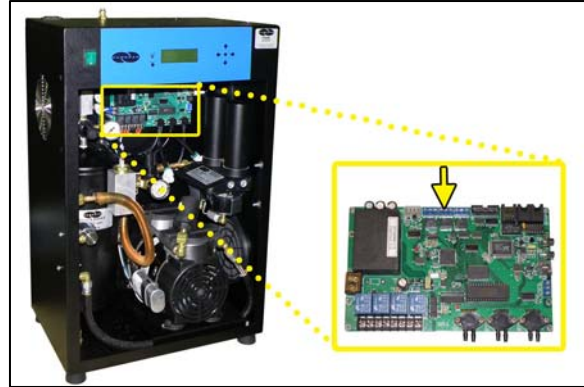

8.13.3 Wire the Power Fail Alarm wire pair to the Control Board as required:

- **PWR FAIL** & **NO** for CLOSE ON ALARM operation.
- **NC** & **PWR FAIL** for OPEN ON ALARM operation

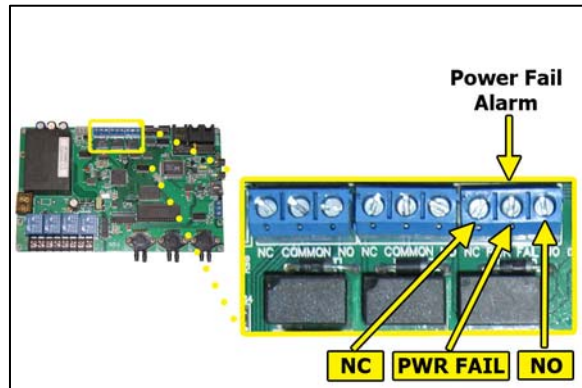

8.13.4 Close front panel.

8.14 Connecting via Web Browser


If the Air Dryer IS connected to an IP network:

- The Air Dryer must be configured with a valid IP Address, Subnet Mask, and Gateway Address for the network.
- An IP cable is connecting the Air Dryer to the network.
- Use a computer that is on the same network as the air Dryer.
- Use Internet Explorer (6.0 or newer) or Mozilla Firefox Web Browser.

If the Air Dryer IS NOT connected to an IP network and has not been configured with IP information:

- Use the default IP Address (*192.168.1.100*) of the air dryer to connect.
- Use an IP Cable (may require Cross-over cable) plugged directly into a Laptop/PC and the other end plugged into the UTP Port on the control board of the Air Dryer.
- Configure the network card on the Laptop/PC to use the IP Address *192.168.1.101*. This will make the Laptop/PC compatible with the Air Dryer.
- Use Internet Explorer (6.0 or newer) or Mozilla Firefox Web Browser.


8.14.1 Type the IP Address of the P1500W2 Series air Dryer in the Address text box of the web browser.

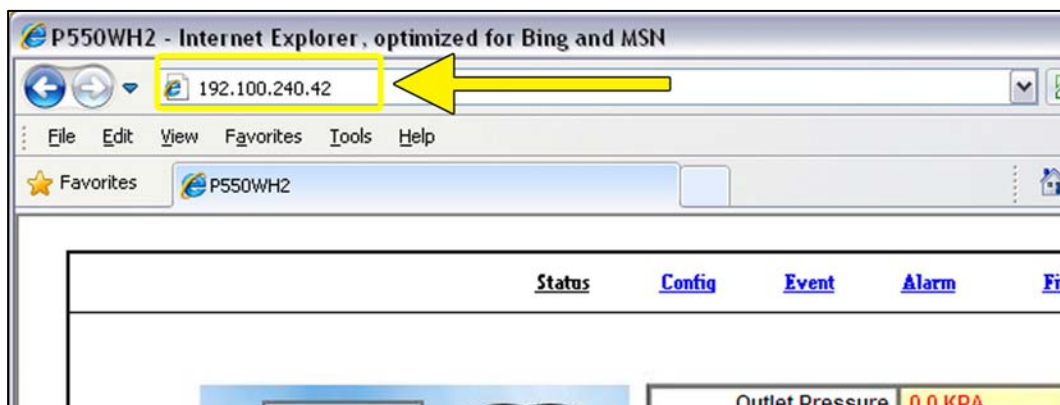

The Web Browser connection offers five (5) screens to the user:


- **Status Screen** - Displays the readings and alarms monitored in the P1500W2 Series Air Dryer. Provides remote ALARM RESET.
- **Config Screen** - All configurations of Set Points, Setups, and Keyword can be made in this screen.
- **Event Screen** - Displays all events such as alarms, changes made, and alarm resets registered by the P1500W2 Series Air Dryer. This screen is informational only.
- **Alarm Screen** - Displays all the Alarms registered by the P1500W2 Series Air Dryer. This screen is informational only.
- **Firmware Screen** – Allows the user to upload any software updates or upgrades to the Air Dryer.

8.14.2 Click on the Menu Bar selection to access a specific screen.

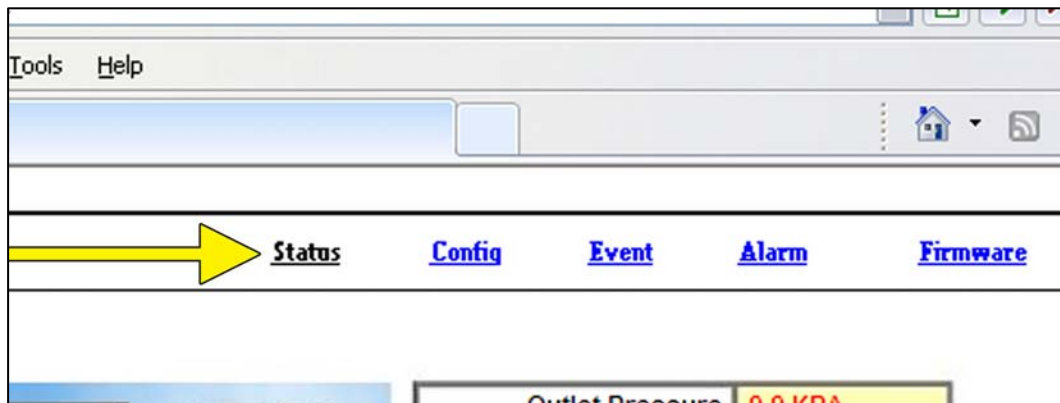


8.15 Using the Status Screen

Displays the readings and alarms monitored in the P1500W2 Series Air Dryer.
Provides remote ALARM RESET.

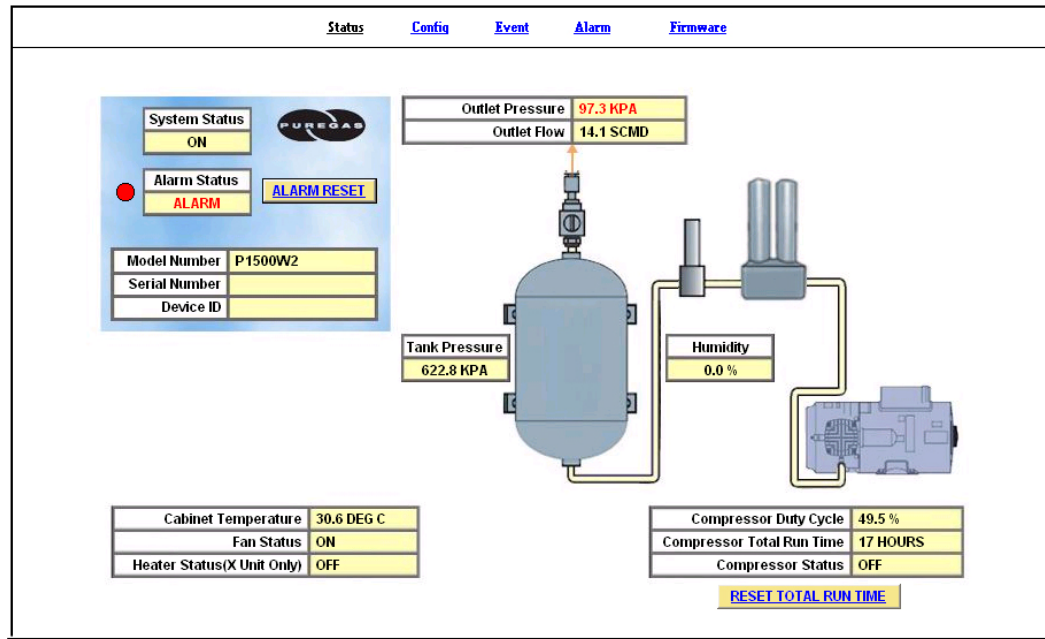


- Readings are displayed in **BLACK** unless an alarm is present.
- Alarms are displayed in **RED** next to the parameter in alarm.

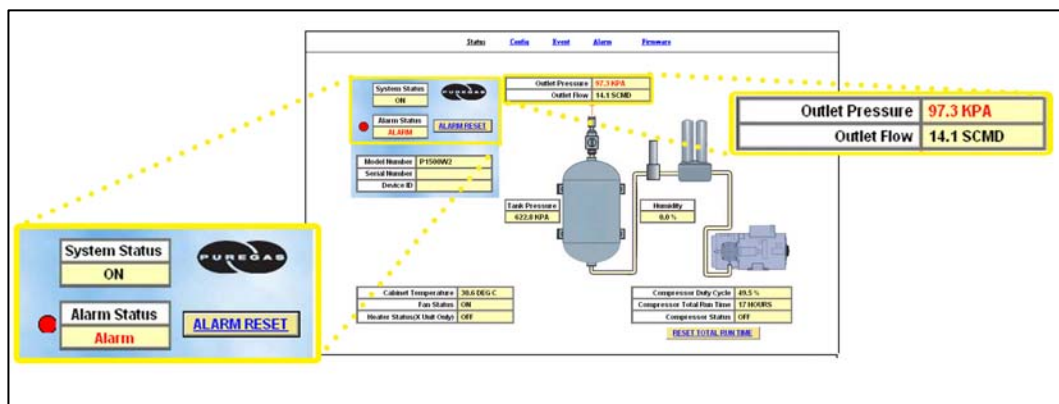


- Alarm Status will display **Alarm** if any alarms are present.
- Keyword validation is required for ALARM RESET and RESET TOTAL RUN TIME.

8.15.1 Resetting an Alarm

8.15.1.1 Click on the **ALARM RESET** Button to remotely reset Air Dryer alarms displayed on Status Screen.

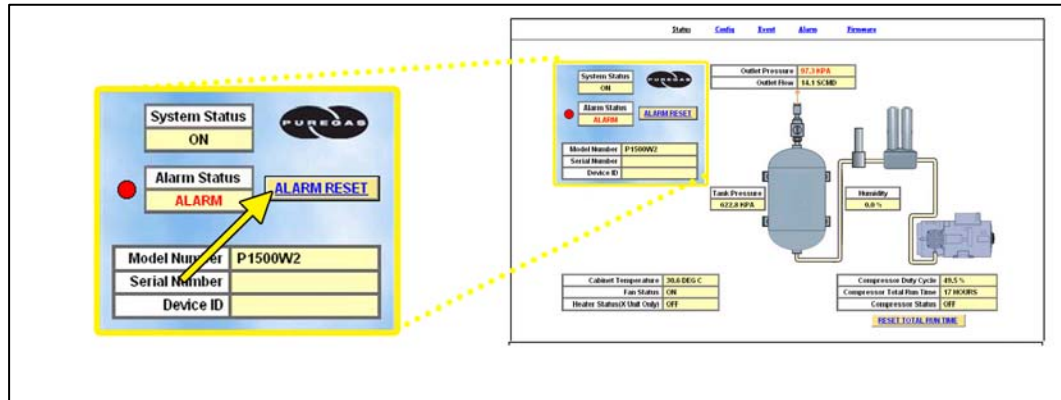


8.15.1.2 Enter Keyword (default is 123456)

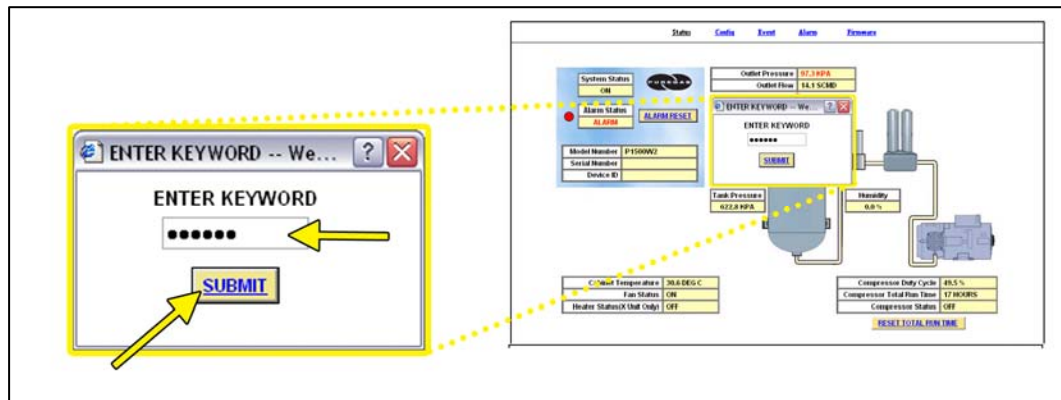


8.15.1.3 Click on **SUBMIT** Button when done.

8.15.2 Resetting Compressor Total Run Time

8.15.2.1 Click on the **RESET TOTAL RUN TIME** Button to remotely reset Compressor Total Run Time displayed on Status Screen.

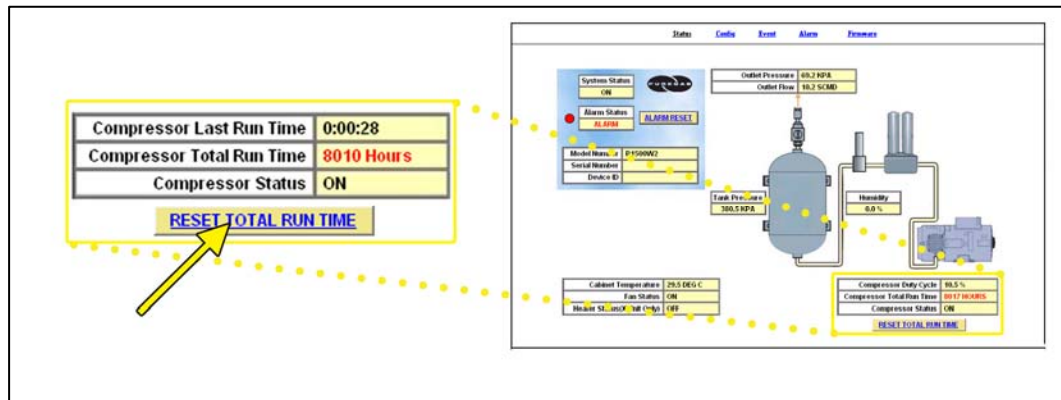

8.15.2.2 Enter Keyword (default is 123456)

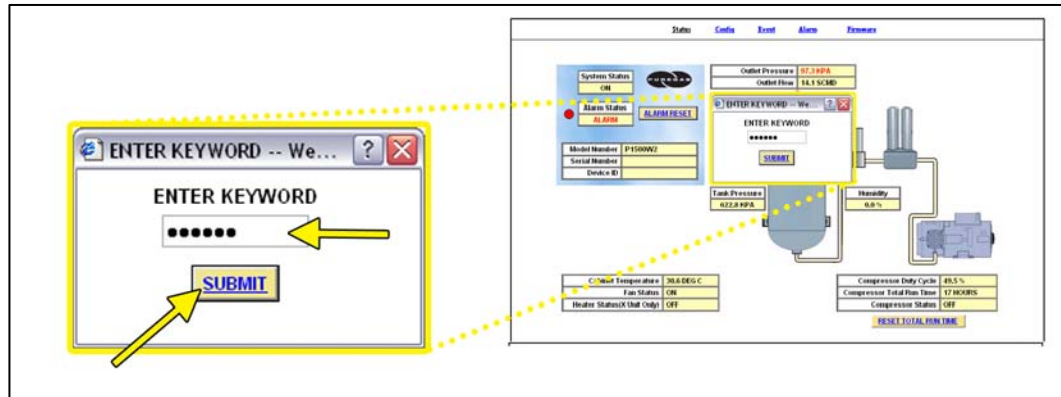

8.15.2.3 Click on **SUBMIT** Button when done.

8.16 Using the Config Screen

All configuration of Set Points, Setups, and Keyword can be made in this screen.

NOTE: Reference Appendix section 14.2 for Limits, Defaults, and Formats.

The screenshot shows the 'Config' tab selected in a navigation bar with 'Status', 'Event', 'Alarm', and 'Firmware' options. The main content area is divided into three sections: 'SYSTEM SETUP', 'ALARM SETUP', and 'NETWORK SETUP'. Each section contains a table of configuration parameters. In the 'SYSTEM SETUP' table, the 'START UP DELAY' has a value of '0' in blue. The 'ALARM SETUP' table lists five parameters: 'HIGH FLOW' (42.0), 'HIGH OUTLET PRESSURE' (83.0), 'LOW OUTLET PRESSURE' (45.0), 'HIGH HUMIDITY' (10.0), and 'HIGH DUTY CYCLE' (70.0), all with values in blue. The 'NETWORK SETUP' table lists 'IP ADDRESS' (192.168.1.100), 'SUBNET MASK' (255.255.255.0), 'GATEWAY ADDRESS' (0.0.0.0), 'SNMP TRAP SERVER ADDRESS' (0.0.0.0), 'CURRENT DATE/TIME' (01/11/12 13:26), and 'DEVICE ID'. At the bottom, there are two buttons: 'ACCEPT' and 'CHANGE KEYWORD'.

SYSTEM SETUP	
Description	Set Point
START UP DELAY	0

ALARM SETUP	
Description	Set Point
HIGH FLOW	42.0
HIGH OUTLET PRESSURE	83.0
LOW OUTLET PRESSURE	45.0
HIGH HUMIDITY	10.0
HIGH DUTY CYCLE	70.0

NETWORK SETUP	
Parameter	Value
IP ADDRESS	192.168.1.100
SUBNET MASK	255.255.255.0
GATEWAY ADDRESS	0.0.0.0
SNMP TRAP SERVER ADDRESS	0.0.0.0
CURRENT DATE/TIME	01/11/12 13:26
DEVICE ID	


ACCEPT CHANGE KEYWORD

- Values in **BLUE** represent the current setting.
- The **ACCEPT** Button is used to change values.
- The **CHANGE KEYWORD** Button allows you to configure a new Keyword.
- Keyword validation is required for the following:
 - Changing a Set Point value
 - Changing the Keyword

8.16.1 Changing a Set Point or Setup value:


8.16.1.1 Click on the value to change.

8.16.1.2 Type in the new value.

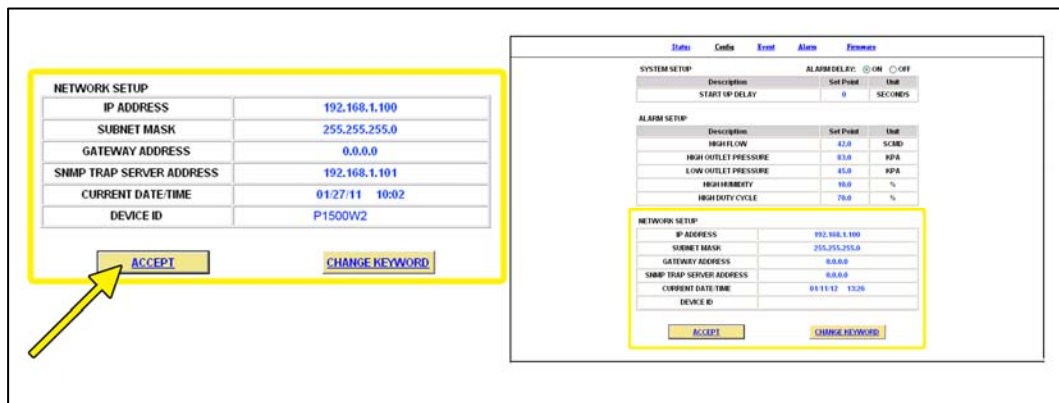

8.16.1.3 Click the **ACCEPT** Button when done.


8.16.1.4 Enter Keyword (default is 123456)

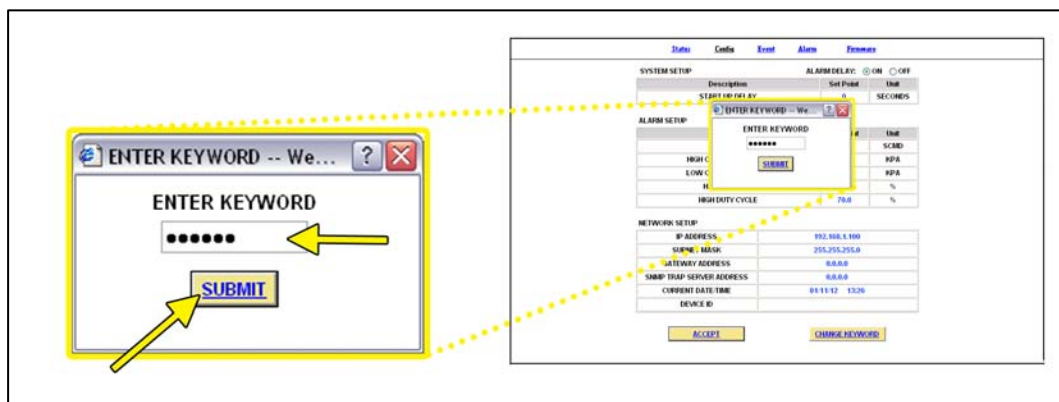

8.16.1.5 Click on **SUBMIT** Button when done. This will lock in the new setting value.

8.16.2 Changing the Keyword


8.16.2.1 Click on **CHANGE KEYWORD** Button to change the keyword.

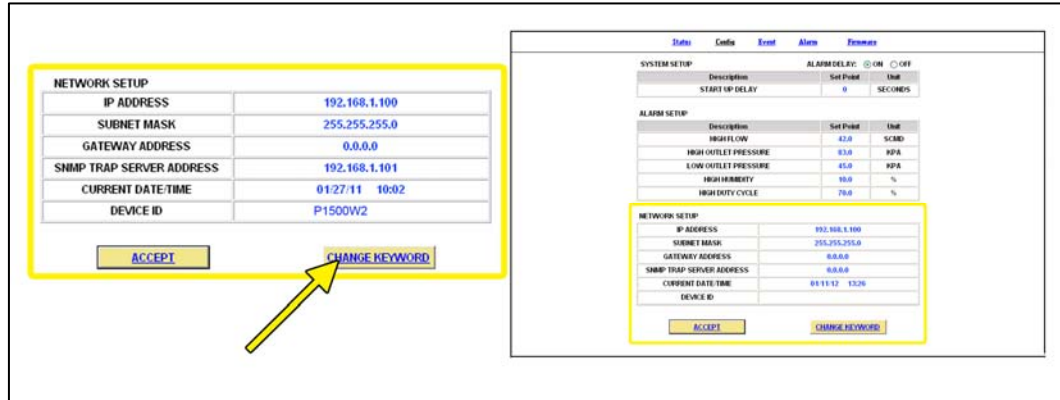

8.16.2.2 Type the Old Keyword.

8.16.2.3 Type the New Keyword.

8.16.2.4 Type the Confirm New Keyword.

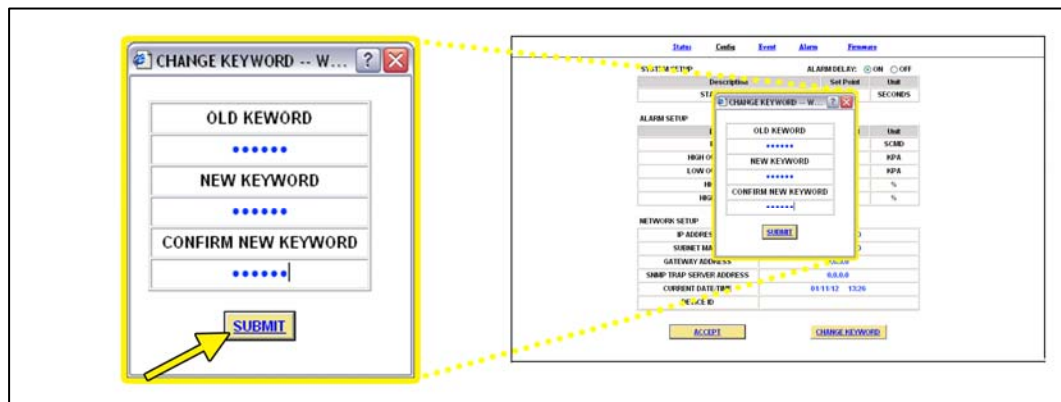





8.16.2.5 Click on **SUBMIT** Button to confirm. This will lock in the new setting value.

8.17 Using the Event Screen

Displays all events such as alarms, changes made, and alarm resets registered by the P1500W2 Series Air Dryers. This screen is informational only.

Status Config Event Alarm						
No.	Event	Description	Remark	Date	Time	
1	Alarm reset		SRC:Key	01/27/2011	08:32:42	
2	Alarm reset		SRC:Key	01/27/2011	08:31:47	
3	Alarm reset		SRC:Key	01/27/2011	08:29:40	
4	Alarm reset		SRC:Key	01/27/2011	08:27:41	
5	Alarm reset		SRC:Key	01/27/2011	08:16:44	
6	Alarm reset		SRC:Key	01/27/2011	08:14:10	
7	Alarm reset		SRC:Key	01/27/2011	08:12:53	
8	Alarm reset		SRC:Key	01/27/2011	08:11:44	
9	Alarm reset		SRC:Key	01/27/2011	08:10:38	
10	Alarm reset		SRC:Key	01/27/2011	08:09:32	
11	Alarm reset		SRC:Key	01/27/2011	08:08:12	
12	Alarm reset		SRC:Key	01/27/2011	08:08:06	
13	Alarm reset		SRC:Key	01/27/2011	08:05:55	
14	Alarm reset		SRC:IE	01/27/2011	07:44:30	
15	Device Restart		DownLoad	01/26/2011	16:21:17	
16	Device Restart		DownLoad	01/26/2011	16:20:17	
17	Device Restart		Power up	01/25/2011	13:47:55	









1 of 1

- Click on the column headings to sort data according to that column.
- Click the Arrow Buttons to navigate through all the event log pages.

8.18 Using the Alarm Screen

Displays all the Alarms registered by the P1500W2 Series Air Dryers. This screen is informational only.

Status Config Event Alarm Firmware				
No.	Description	Alarm Read	Date ▼	Time ▼
1	Maintenance Required Alarm	ALARM	01/11/2012	13:24:46
2	High Outlet Pressure Reading	97.3	01/11/2012	13:19:41
3	High Cabinet Temperature Reading	54.09	01/09/2012	19:06:54
4	High Cabinet Temperature Reading	50.80	01/09/2012	19:05:39
5	High Cabinet Temperature Reading	60.35	01/09/2012	19:04:13
6	Low Outlet Pressure Reading	25.1	01/09/2012	19:00:21
7	High Flow Reading	35.58	01/09/2012	19:00:20
8	Low Outlet Pressure Reading	38.8	01/09/2012	18:55:22
9	High Flow Reading	44.25	01/09/2012	18:55:21
10	High Flow Reading	43.45	01/09/2012	18:52:31
11	High Flow Reading	43.44	01/09/2012	18:52:27
12	High Flow Reading	43.41	01/09/2012	18:52:25
13	High Flow Reading	43.27	01/09/2012	18:52:17
14	High Flow Reading	43.14	01/09/2012	18:52:13
15	High Flow Reading	43.03	01/09/2012	18:52:11
16	High Flow Reading	39.79	01/09/2012	18:52:07
17	High Flow Reading	28.10	01/09/2012	18:50:44
18	High Outlet Pressure Reading	87.4	01/09/2012	18:50:43





1 of 7

- Click on the column headings to sort data according to that column.
- Click the Arrow Buttons to navigate through all the event log pages.

8.19 Using the Firmware Screen

Displays the current firmware version and date of the P1500W2 Series Air Dryers.

The screenshot shows a web-based interface with a navigation bar at the top containing five tabs: [Status](#), [Config](#), [Event](#), [Alarm](#), and [Firmware](#). The [Firmware](#) tab is currently selected. Below the navigation bar, the main content area displays the following information:


Current Version:	P1500W2 Dryer, Version 2.79 16 May 11	
New Version File:	<input type="text"/>	Browse...

Below the table, there is a yellow button labeled **ACCEPT**.

- **Current Version:** Displays the current firmware version of the P1500W2 Air Dryer.
- **New Version File:** Displays the new location and new firmware version chosen.
- The **BROWSE** Button allows you to locate the new firmware file.
- The **ACCEPT** Button is used to change values.
- Keyword validation is required to update firmware.

8.19.1 Updating the Firmware:


8.19.1.1 Click on **BROWSE** Button to locate the firmware file.

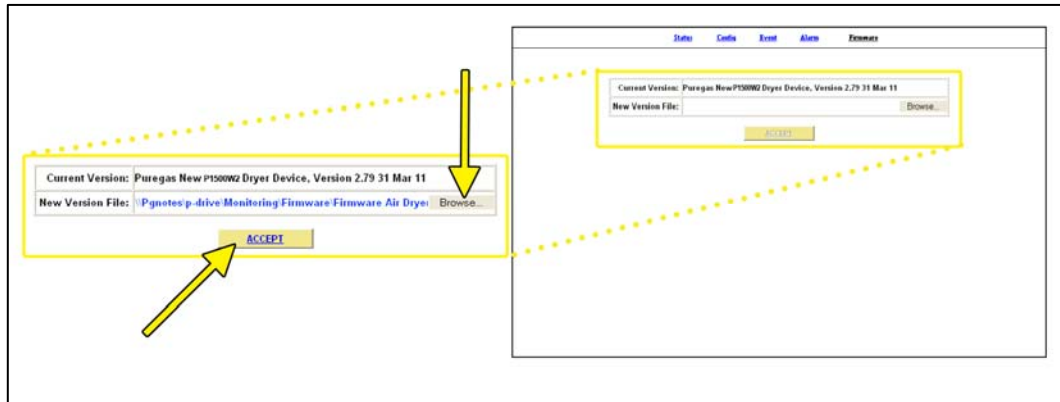

8.19.1.2 Navigate and select the correct .bin file. Press the **OK** Button.

8.19.1.3 Click the **ACCEPT** Button.

8.19.1.4 Enter Keyword (default is 123456)

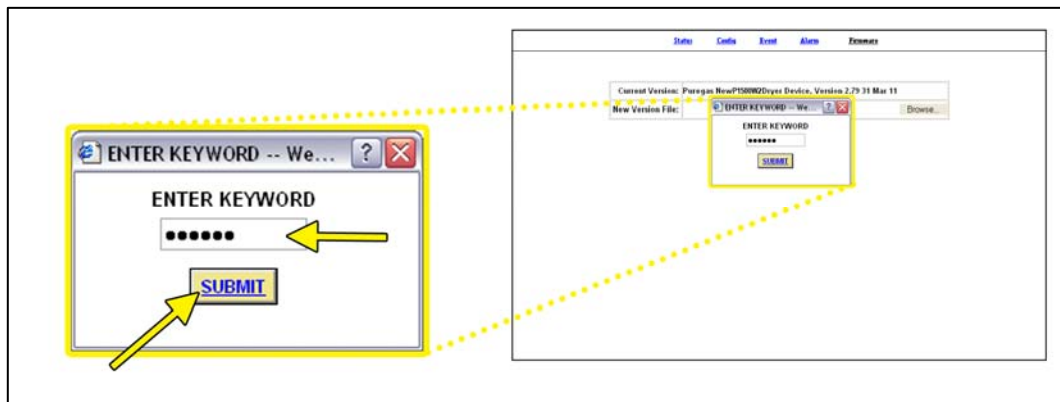

8.19.1.5 Click on **SUBMIT** Button when done. This will lock in the new firmware version.

8.20 Connecting via SNMP

Using SNMP to connect and communicate with the P1500W2 Series Air Dryer is dependant upon the specific SNMP Management software used on your network.

This software requires a SNMP Definition & Configuration File (MIB file) in order to properly communicate with the Air Dryer. This file is named “PuregasP1500W2.mib” and is located on the Mini CD included with your Air Dryer. It is necessary to import this file into your SNMP operating software.

NOTE: Reference Appendix section 14.3 for a list of SNMP Parameters including Limits, Defaults, and Formats.

9. Testing Your Dryer

9.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



CAUTION!

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the control board without depressurizing the air dryer first, or **damage to the control board will occur.**

9.2 Measuring Compressor Amp Draw




WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some these components to become hot when in operation or standby.

With the Compressor running:

9.2.1 Open front panel (section 8.7).

9.2.2 Locate wire #5 coming directly from the compressor.

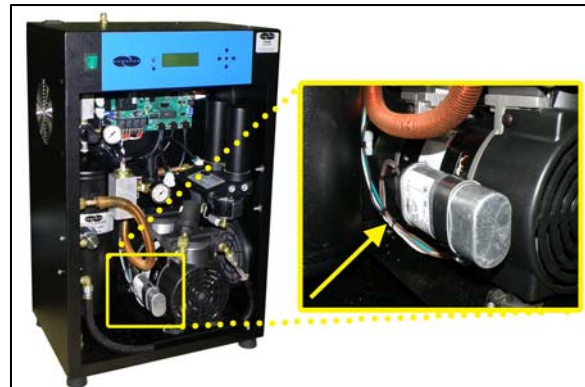

9.2.3 Use an Amp Meter to measure the running amps. With the compressor running, the running amps should measure:

- **6.3 amps or below** for the P1500W2 & P1500W2LP models
- **3.2 or below** for the P1502W2 & P1502W2LP models

9.2.4 Close front panel.

If the compressor measures over running amps indicated above, see section 13.16 for troubleshooting information.



9.3 Measuring Compressor Voltage



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.

9.3.1 Power the air dryer **OFF** (section 8.3).

9.3.2 Open front panel (section 8.7).

9.3.3 Depressurize the air dryer (section 8.8).

9.3.4 Locate wire #5 at the solid state relay and wire #6 on control board.

9.3.5 Lift plastic cover on control board over wire #6.

9.3.6 Power the air dryer ON (section 8.3).

9.3.7 Use a Voltmeter to measure the voltage:



- 9.3.7.1** Place the probes over terminals for wire #5 and wire #6.

The voltage should measure:

- **110 - 125 VAC** for the P1500W2 & P1500W2LP models
- **208 - 230 VAC** for the P1502W2 & P1502W2LP models

9.3.8 Close plastic cover on control board over wire #6.

9.3.9 Close front panel.

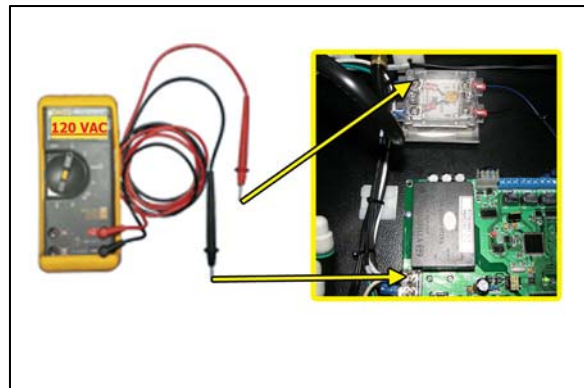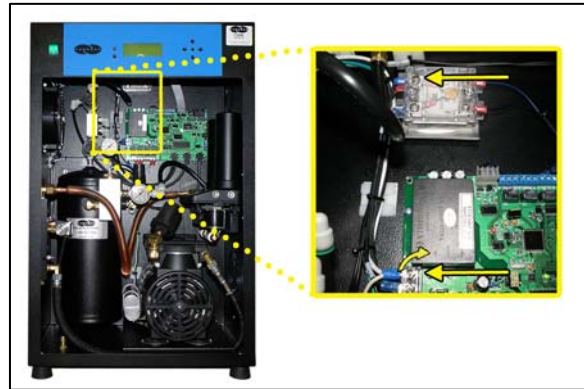

9.4 Measuring Incoming Voltage




WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. It is highly recommended that you remove all jewelry before performing any procedures.

9.4.1 Open front panel (section 8.7).

9.4.2 Locate the Incoming **POWER** connector inside the dryer.

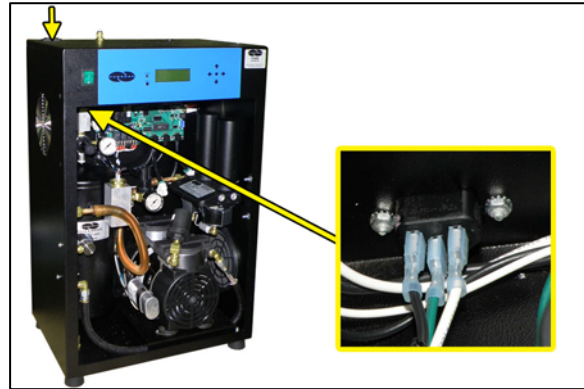

9.4.3 Use a Voltmeter to measure the voltage (inside dryer):


9.4.3.1 Place the probes between the Power Connector and terminal insulation so that they touch the metal contacts for BLACK (BROWN) wire and WHITE (BLUE) wire.

The voltage should measure:

- **110 - 125 VAC** for the P1500W2 & P1500W2LP models
- **208 - 230 VAC** for the P1502W2 & P1502W2LP models

9.4.4 Close front panel.


If the incoming voltage measures less than indicated above, it is recommended that steps be taken at your facility to bring the power to the recommended level of voltage.

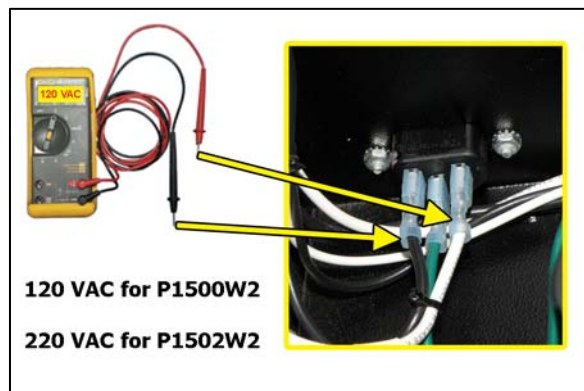

9.5 Measuring Voltages at Solid State Relay

9.5.1 Open front panel (section 8.7).


9.5.2 Locate the Solid State Relay inside the Dryer at the top of back wall.

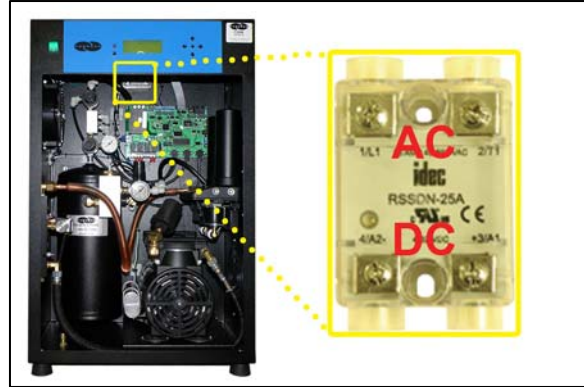

With the Compressor running:

9.5.3 Use a Voltmeter to measure across the AC terminals.
Should measure **0 VAC**.

9.5.4 Use a Voltmeter to measure across the DC terminals.

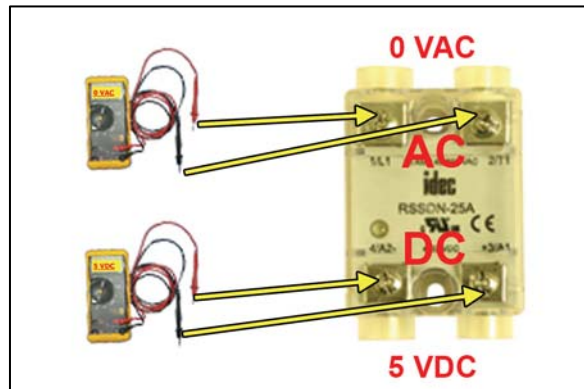

Should measure:


- **5 VDC** for the P1500W2 & P1500W2LP models
- **12 VDC** for the P1502W2 & P1502W2LP models

With the Compressor NOT running:

9.5.5 Use a Voltmeter to measure across the AC terminals.

Should measure:

- **110 - 125 VAC** for the P1500W2 & P1500W2LP models
- **208 - 230 VAC** for the P1502W2 & P1502W2LP models

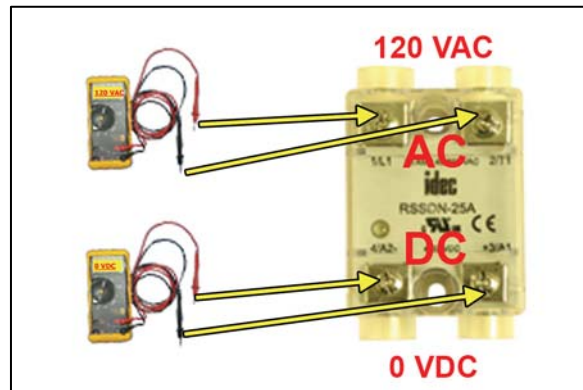

9.5.6 Use a Voltmeter to measure across the DC terminals.

Should measure **0 VDC**.

9.5.7 Close front panel.

If any of the voltage measurements are different than indicated above, the Solid State Relay is defective and should be replaced. See sections 11.1 for part detail and 11.5 for ordering information.

9.6 Testing Consistent Heatless Dryer Cycling




WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.


With the Compressor running:

9.6.1 Open front panel (section 8.7).

9.6.2 Place a piece of insulating material over the compressor for this test (*i.e. piece of cardboard*).

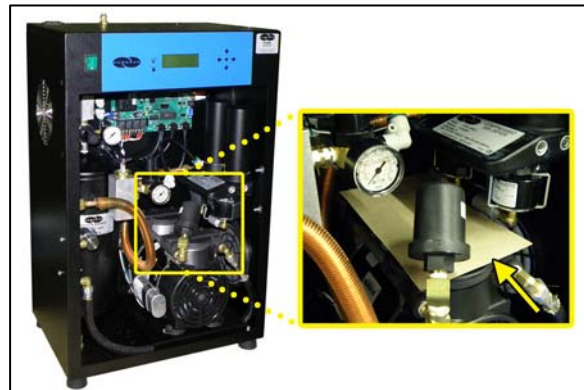


9.6.3 Locate the heatless dryer purge solenoids inside the air dryer.

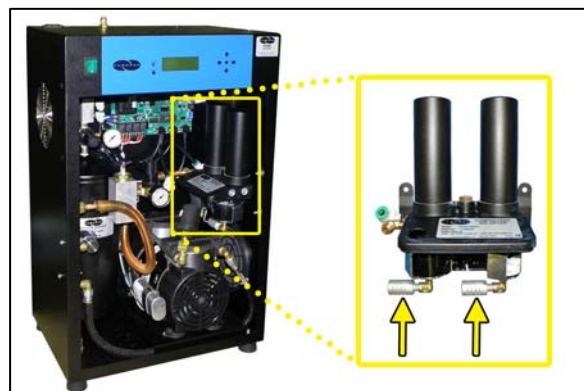

9.6.4 Place your hand beneath the purge solenoids to feel for purging air. Air should:

- Purge from Tower 1 side
- Purge from Tower 2 side
- **30 Seconds** later
- Purge from Tower 1 side
- **30 Seconds** later
- ...and so on.

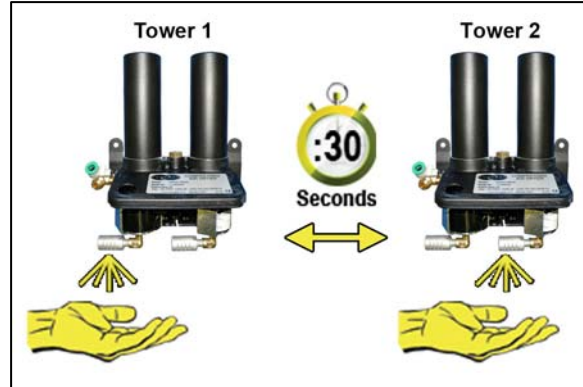

9.6.5 Remove insulating material from top of the compressor.

9.6.6 Close front panel.



If the Heatless Dryer is not cycling consistently as described, see section 13.13 for troubleshooting information.

9.7 Testing Unloader Valve

With the Compressor running:

9.7.1 Open front panel (section 8.7).

9.7.2 Locate the Unloader Valve on the left side of the Dryer.

9.7.3 With a 9/16" wrench disconnect hose from the Unloader Valve.



9.7.4 Place your hand under the Unloader Valve to verify for air flow.


The Unloader Valve should purge all the head pressure when the compressor turns off, and for approximately 2 seconds when the compressor starts up again.



If air flows from this valve continuously the Unloader Valve is defective and should be replaced. See sections 11.2 for part detail and 11.5 for ordering information.

9.7.5 With a 9/16" wrench connect hose to the Unloader Valve.

9.7.6 Close front panel.

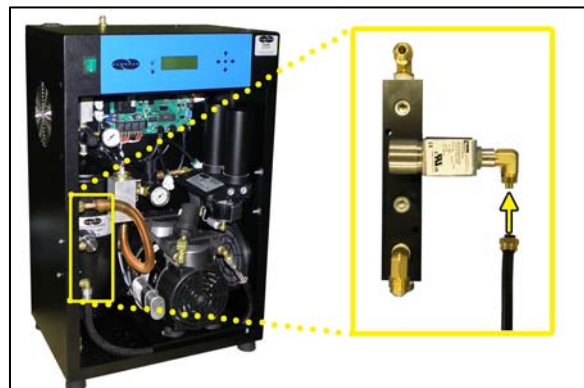

9.8 Measuring Heatless Dryer Solenoid Voltage

With the Compressor running:

9.8.1 Open front panel (section 8.7).


9.8.2 Locate the Heatless Dryer Cycle Timer.

The timer has three (3) sets of terminals (from left-to-right):

“**VALVE**” – Left solenoid


“**IN**” – Incoming power

“**VALVE**” – Right solenoid

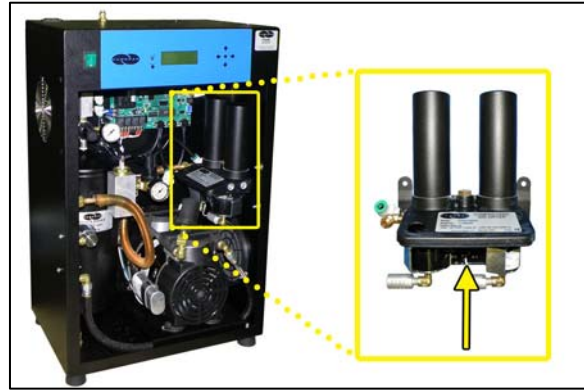

9.8.3 Use a Voltmeter to measure the DC voltage across each set of “**VALVE**” terminals.

Continue to measure for up to 45 seconds if no voltage is initially measured.

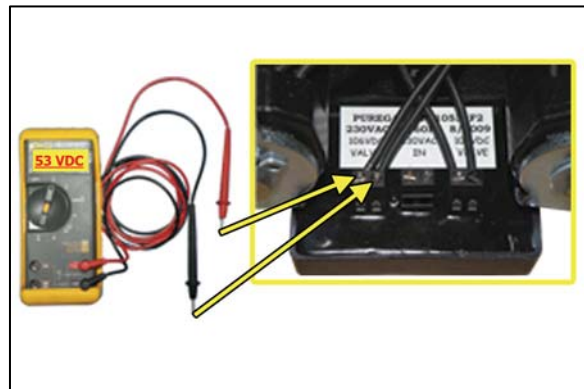

The voltage should measure:

- **53 VDC** for the P1500W2 & P1500W2LP models
- **106 VDC** for the P1502W2 & P1502W2LP models

9.8.4 Close front panel.


If the voltage does not measure as indicated above, this is an indication that the Cycle Timer is defective and should be replaced. See sections 11.3 for part detail and 11.5 for ordering information.

9.9 Testing Air Dryer Fan

NOTE: To test the fan, the cabinet temperature must be above 32° C.

9.9.1 Place your hand outside the dryer to feel for air being blown outwards.

NOTE: The fan will turn OFF when the cabinet temperature is below 27° C.

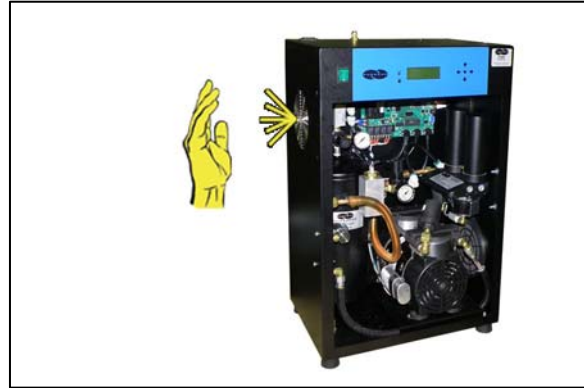

If the fan is not blowing air outwards as described:

- *Verify the cabinet temperature is above 32° C.*
- *Check for loose wiring. Refer to the Wiring Diagram (section 14.1)*
- *Replace defective fan (see sections 11.1 for part detail and 11.5 for ordering information).*
- *Replace defective control board if fan does not respond properly to temperature changes (see sections 11.2 for part detail and 11.5 for ordering information).*


9.10 Testing Safety Relief Valve

9.10.1 Open front panel (section 8.7).

9.10.2 Pull the ring handle on the Safety Relief Valve to verify air pressure is released.

9.10.3 Release ring handle and verify that no air is leaking from the valve.

9.10.4 Close front panel.

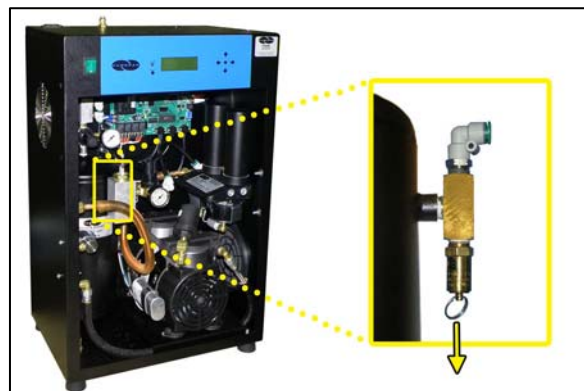

If the Safety Relief Valve fails either test described, it must be replaced. See sections 11.2 for part detail and 11.5 for ordering information.

9.11 Testing Compressor ON/OFF Cycling

9.11.1 Open front panel (section 8.7).

9.11.2 When the Unit Screen (8.4.5.1) appears on the display, press the **HOLD Button** on the Front Panel to freeze that screen.



With Compressor running:

9.11.3 Verify the compressor shuts down when the tank pressure (**TANK**) reaches **620 KPa**.


*If the tank pressure (**TANK**) fails to reach 620 KPa, see section 13.15 for troubleshooting information.*



With Compressor NOT running:

9.11.4 Pull the ring handle on the Safety Relief Valve to release air pressure from the air tank.

9.11.5 Verify the compressor turns on when the tank pressure (**TANK**) falls to **345 KPa**.

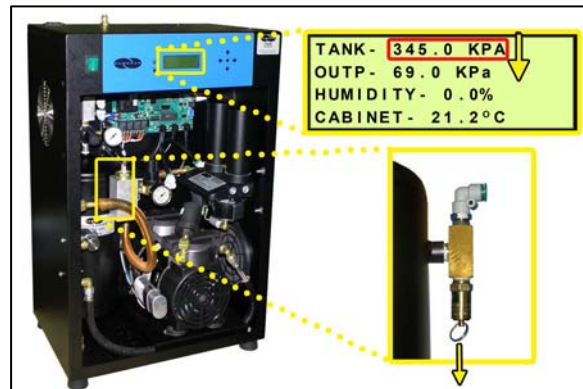

9.11.6 Close front panel


If the Compressor Cycling fails either test described, it indicates a problem with the Control Board which will need to be replaced. See sections 11.2 for part detail and 11.5 for ordering information.

9.12 Testing High Duty Cycle Alarm

9.12.1 Open front panel (section 8.7).

9.12.2 Allow the Compressor to run and then turn off.


9.12.3 Immediately after the Compressor turns off, pull the ring handle on the Safety Relief Valve until the compressor starts running again.

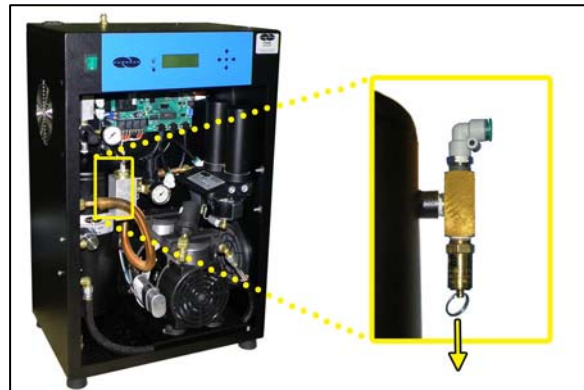

A High Duty Cycle alarm should appear on the System Screen.

9.12.4 Press the **RESET** Button.

9.12.5 Close front panel.

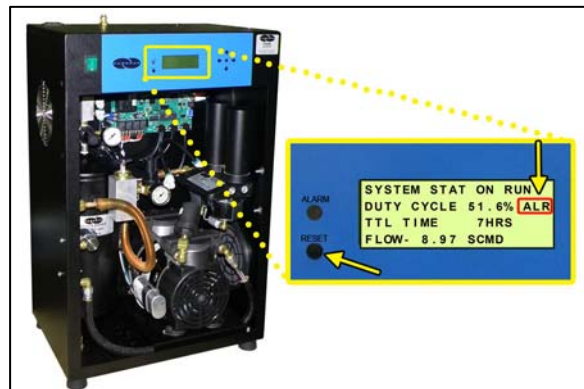


If you are unable to create a High Duty Cycle alarm as described, see section 13.18 for troubleshooting information.


9.13 Testing Humidity Alarm and System Shutdown

9.13.1 Power the air dryer **OFF**.


9.13.2 Open front panel (section 8.7).

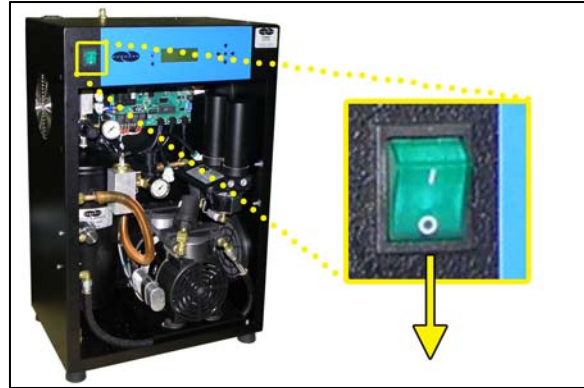


9.13.3 Depressurize the air dryer.

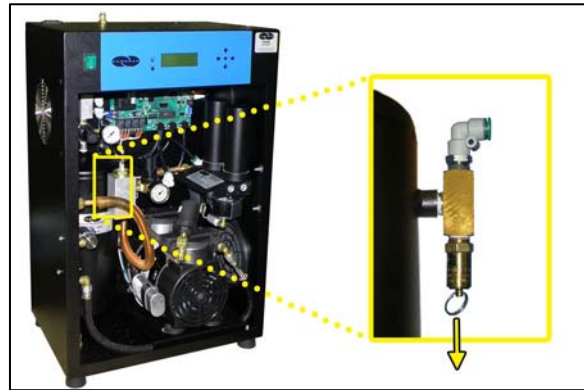

9.13.4 Unscrew and remove the Humidity Sensor from the Humidity Block.

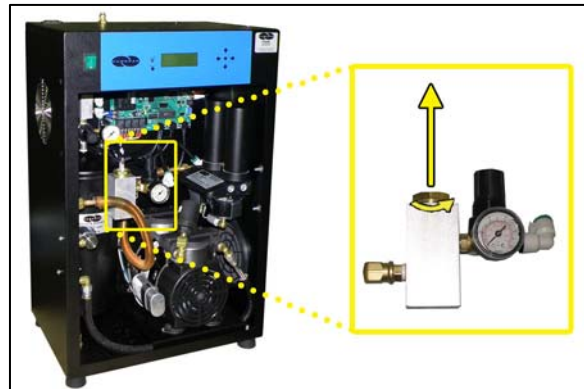


9.13.5 Power the air dryer **ON**.

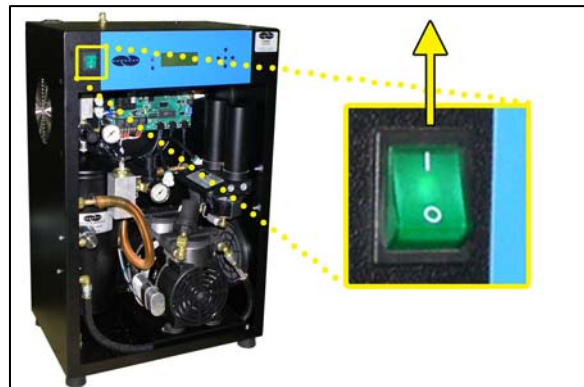


- 9.13.6** Allow the Humidity reading to rise over 10.0%

After three (3) minutes, verify that a Humidity Alarm appears and the dryer goes into **SHUTDOWN** mode.

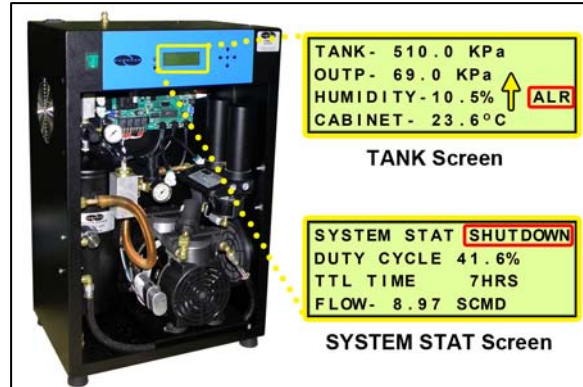


- 9.13.7** Replace the Humidity Sensor into the Humidity Block.

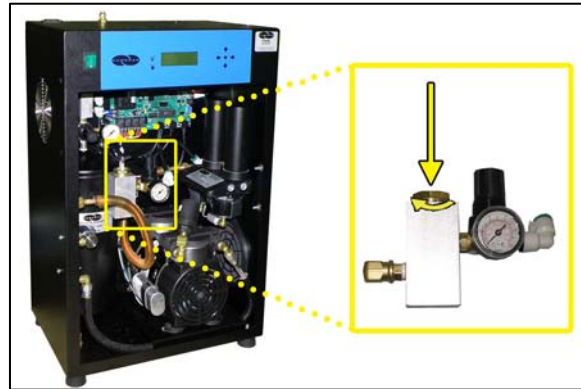

- 9.13.8** Press the **RESET Button** to clear the Humidity alarm.

- 9.13.9** Close front panel.

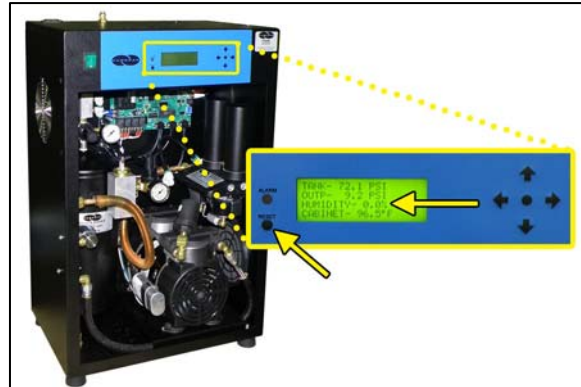

If you are unable to create a Humidity / Shutdown alarm as described, see section 13.10 for troubleshooting information.


9.14 Testing High Outlet Pressure Alarm

9.14.1 Make a note of the current Outlet Pressure (**OUTP**) reading.

9.14.2 Open front panel (section 8.7).




9.14.3 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).

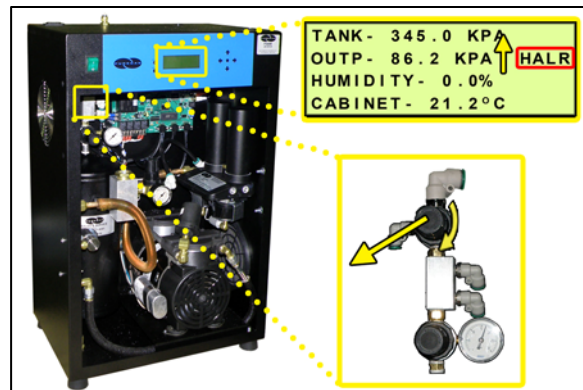

9.14.4 Turn knob clockwise until Outlet Pressure (**OUTP**) reading climbs **over 83 KPa (or over 51.71 KPa – LP models)**.

After one (1) minute, the High Pressure Alarm should appear on the display.

9.14.5 Turn Outlet Pressure Regulator knob counter-clockwise until Outlet Pressure (**OUTP**) reading lowers to the reading recorded in step 9.14.1

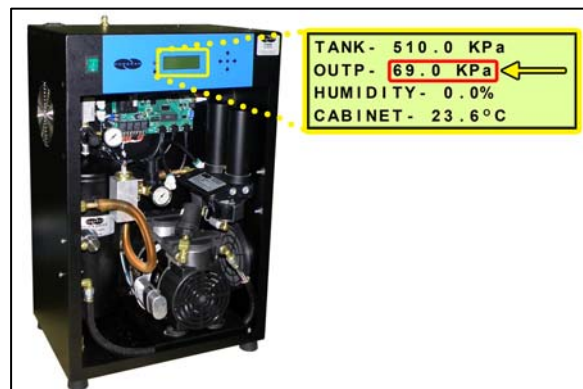

9.14.6 Push knob in to lock (or tighten the retaining nut – LP Models).

9.14.7 Press the **RESET Button**.

9.14.8 Close front panel.

If you are unable to create a High Outlet Pressure Alarm as described, see section 13.6 for troubleshooting information.

9.15 Testing Low Outlet Pressure Alarm


9.15.1 Make a note of the current Outlet Pressure (**OUTP**) reading.

9.15.2 Open front panel (section 8.7).




9.15.3 Pull the Outlet Pressure Regulator knob out (or loosen the retaining nut – LP Models).

9.15.4 Turn knob counter-clockwise until Outlet Pressure (**OUTP**) reading drops **below 45 KPa** (or **below 2.07 KPa – LP models**).

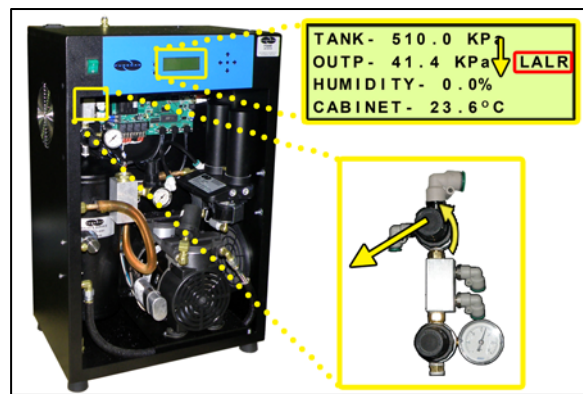

After one (1) minute, the Low Pressure Alarm should appear on the display.

9.15.5 Turn Outlet Pressure Regulator knob clockwise until Outlet Pressure (**OUTP**) reading rises to the reading recorded in step 9.15.1

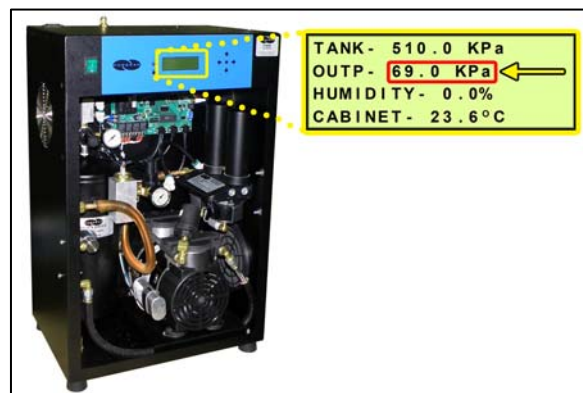

9.15.6 Push knob in to lock (or tighten the retaining nut – LP Models).

9.15.7 Press the **RESET Button**.

9.15.8 Close front panel.

If you are unable to create a Low Outlet Pressure Alarm as described, see section 13.8 for troubleshooting information.

9.16 Testing Air Fittings & Hoses for Leaks

NOTE: This is a general procedure that can be applied to any fitting or hose that has air pressure in it. **DO NOT SOAP TEST THE HUMIDITY SENSOR FITTING. DAMAGE TO THE SENSOR MAY OCCUR.**


With Compressor NOT running:

9.16.1 Listen for any 'hissing' sounds which may indicate a fitting or hose air leak.

With Compressor running:

9.16.2 Use a 1-inch paint brush to dab soapy water on the air fitting or hose connection to be tested.

If air bubbles appear at the connection, this indicates that air is leaking from the connection.

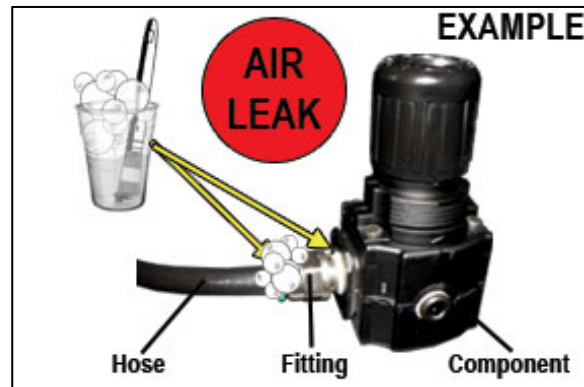

If any leaks are detected, take steps to seal them off (as necessary):

- *Tighten the fitting*
- *Re-connect the hose end*
- *Replace the fitting / hose / component*

10. Maintaining Your Dryer

In order to ensure that your P1500W2 Series Air Dryer continues to operate efficiently and reliably, PUREGAS recommends performing the following maintenance procedures at the specified Six Month and 8,000 Hour intervals.

It is also recommended that you print out the included *Six Month Maintenance (section 10.2)* and *8,000 Hour Maintenance (section 10.3)* log sheets and record all completed maintenance for historical tracking and reference purposes.

The log sheets include a Section reference column which indicates the User's Guide section containing the information about the specific procedure. Please refer to these sections for detailed procedural information.

NOTE: When operating at higher ambient temperatures, it is recommended that maintenance be performed more frequently.

NOTE: After 16,000 hours of run time, PUREGAS recommends sending in your compressors and heatless dryers for a complete and comprehensive rebuild by our Service Department technicians. *See sections 12.1 and 12.2 for information on services and contacting PUREGAS.*

10.1 Safety & Warning Information



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.

**WARNING!**

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.

**CAUTION!**

SHUT DOWN IMMEDIATELY FOR REPAIRS if the air compressor shows any evidence of overheating or presents excessive noise.

**CAUTION!**

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air dryer first, or **damage to the Control Board will occur.**

**IMPORTANT!**

Performing routine maintenance as outlined in the *Maintaining Your Dryer* section will ensure optimal performance over the lifecycle of your air dryer.

**IMPORTANT!**

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**

**IMPORTANT!**

After performing any maintenance, always soap test pressure fittings to check for air leaks. Also, check for any loose or disconnected wiring.

10.2 Six Month Maintenance

MODEL: _____

LOCATION NAME: _____

SERIAL NUMBER: _____

ADDRESS: _____

DATE INSTALLED: _____

Procedure	Section	Maintenance Interval (Months)				
		6	12	18	24	30
Install Six Month Maintenance Kit P011910	11.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Read & Record Flow Rate (FLOW)	8.4.5.2					
Measure & Record Compressor Amp Draw	9.2					
Measure & Record Incoming Voltage (must be 110 - 125 VAC for P1500W2 & P1500W2LP models and must be 208 - 230 VAC for P1502W2 & P1502W2LP models)	9.4					
Set System Pressure (552 KPa / 80 PSI)	8.9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Static Pressure (117 KPa / 17 PSI)	8.10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Outlet Pressure	8.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Consistent Heatless Dryer Cycling	9.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Fan	9.9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Compressor ON/OFF Cycling	9.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test High Duty Cycle Alarm	9.12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Humidity Alarm & System Shutdown	9.13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test High & Low Outlet Pressure Alarms	9.14 & 9.15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Air Fittings for Leaks	9.16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Visually Inspect Inside & Outside of Unit for Loose Wiring or Hardware		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Maintenance Performed by:						
Date of Maintenance:						

NOTE: COPY OR PRINT THIS PAGE AND KEEP IT WITH THE AIR DRYER

10.3 8,000 Hour Maintenance

Under typical operating conditions:

8,000 hours of run time will occur between one (1) and two (2) years of use.

This will be identified by a **TTL TIME** Alarm on the display.

MODEL: _____

LOCATION NAME: _____

SERIAL NUMBER: _____

ADDRESS: _____


DATE INSTALLED: _____

Procedure	Section	Maintenance Interval (Hours)				
		8,000	16,000	24,000	32,000	40,000
Install 8,000 Hour Maintenance Kit P012252	11.4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Read & Record Flow Rate (FLOW)	8.4.5.2					
Measure & Record Compressor Amp Draw	9.2					
Set System Pressure (552 KPa / 80 PSI)	8.9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Static Pressure (117 KPa / 17 PSI)	8.10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Set Outlet Pressure	8.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Consistent Heatless Dryer Cycling	9.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Compressor ON/OFF Cycling	9.11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Test Air Fittings for Leaks	9.16	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Reset TTL TIME Reading to Zero	8.6.6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Visually Inspect Inside & Outside of Unit for Loose Wiring or Hardware		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Maintenance Performed by:						
Date of Maintenance:						

NOTE: COPY OR PRINT THIS PAGE AND KEEP IT WITH THE AIR DRYER


11. Replacement Parts & Accessories

11.1 Dryer Parts

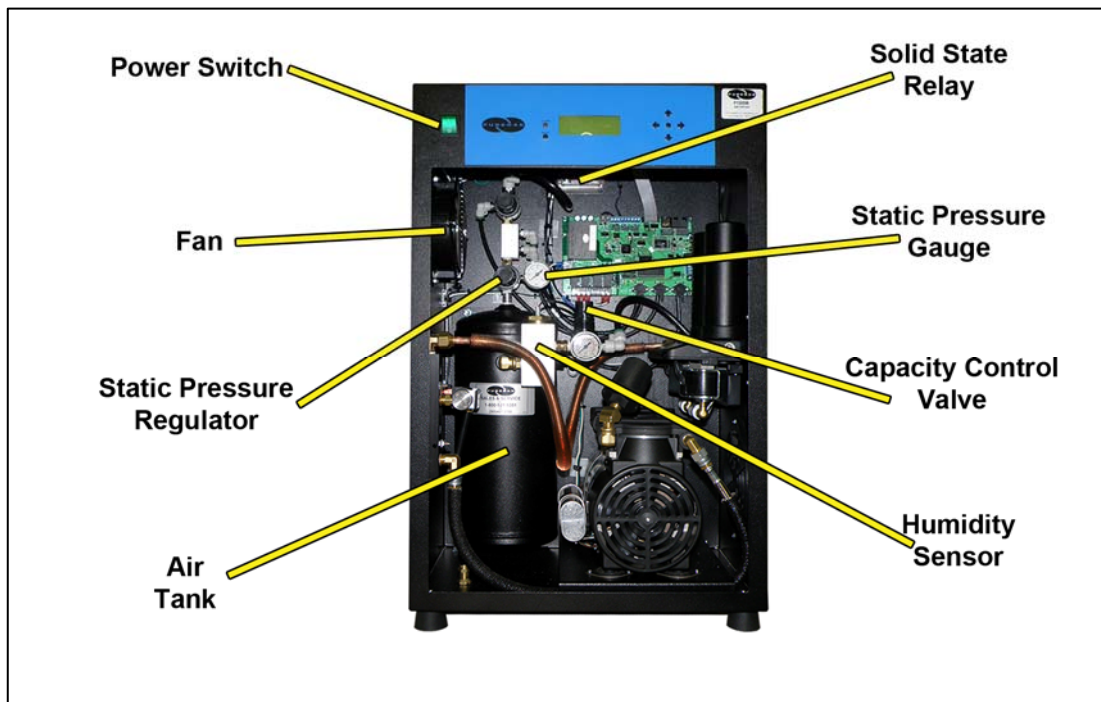


Description	Part Number		Quantity	Recommend Spare
	P1500W2	P1502W2		
Power Switch	M038428		1	
Fan	P4080	P40801	1	
Static Pressure Regulator	P010279		1	
Air Tank			1	
Solid State Relay	P05992		1	✓ (1)
Static Pressure Gauge	P8345		1	
Capacity Control Valve	P010492		1	✓ (1)
Humidity Sensor	<i>In Kit P011910 See section 11.4</i>			

11.2 Dryer Parts cont.

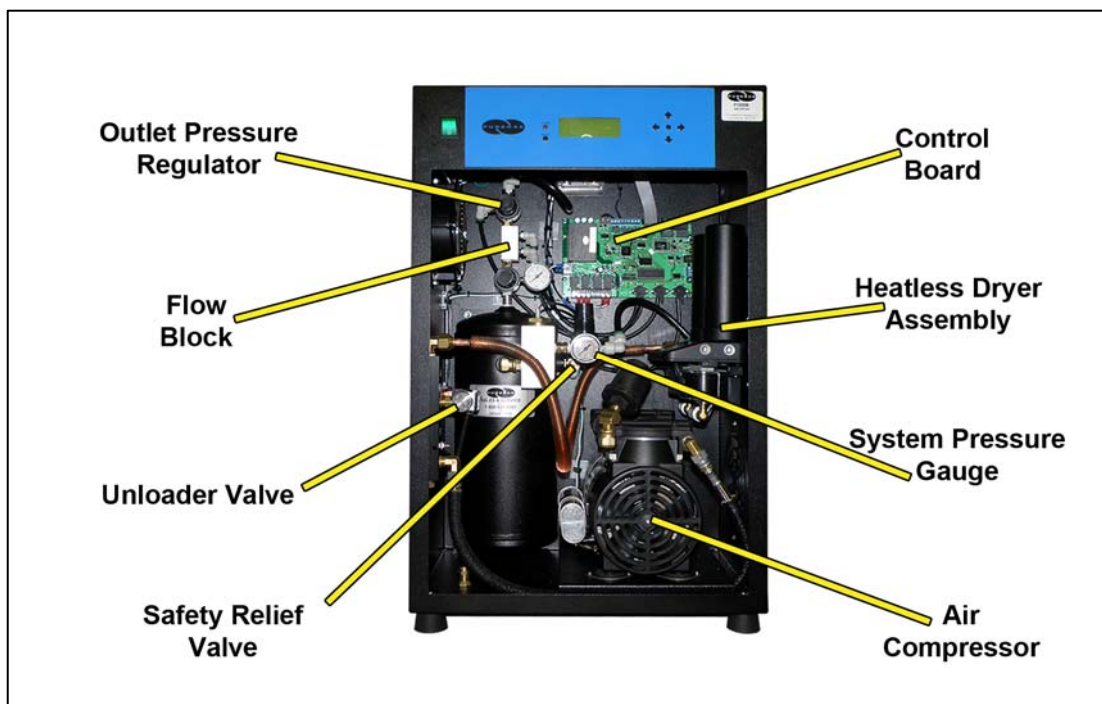





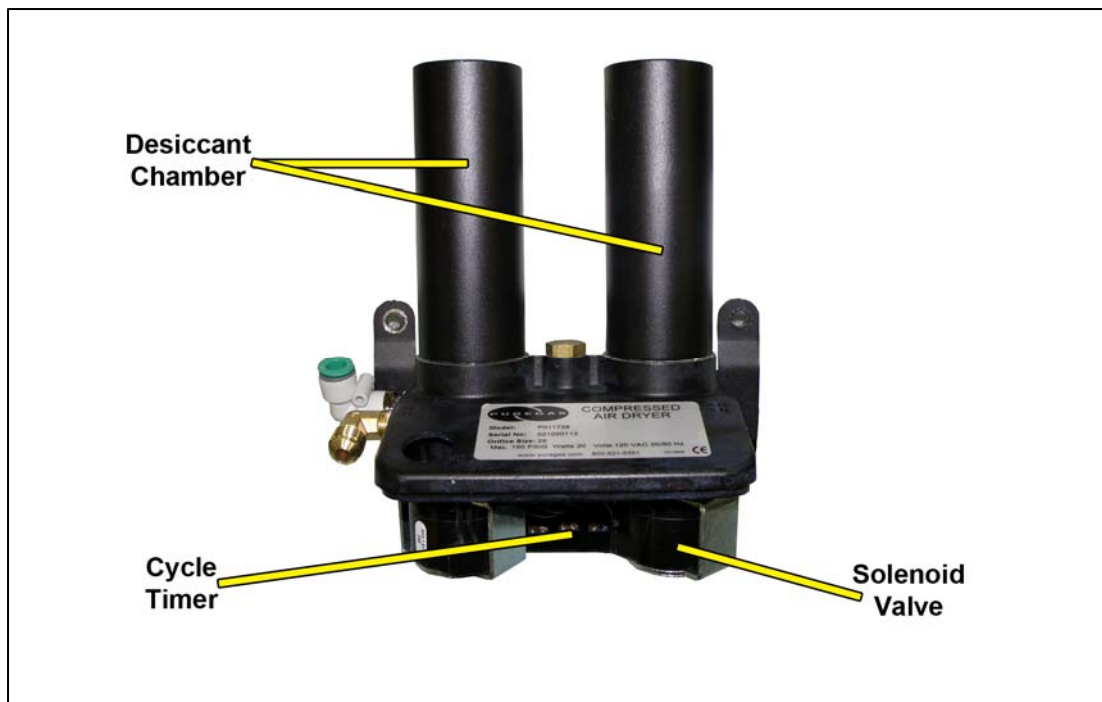

Description	Part Number		Quantity	Recommend Spare
	P1500W2	P1502W2		
Outlet Pressure Regulator Standard Pressure Low Pressure	P010279 P012316		1	
Flow Block			1	
Unloader Valve	P011022	P010453	1	
Safety Relief Valve	P011777		1	
Control Board - Standard Pressure Low Pressure	P011892 P012395		1	✓ (1)
Heatless Dryer Assembly	<i>See section 11.3 for detail.</i>			
System Pressure Gauge	P010695		1	
Air Compressor	P011781	P011873	1	✓ (1)

11.3 Heatless Dryer Assembly Parts



Description	Part Number		Quantity	Recommend Spare
	P1500W2	P1502W2		
Heatless Dryer	PHF2C106023	PHF2C20623	1	
Desiccant Chamber	P2004036		2	
Cycle Timer	P010530F1	P010530F2	1	
Solenoid Valve Kit	<i>In Kit P012252 See section 11.4 for detail.</i>			

11.4 Accessories for Your Dryer

	Description	Part Number	Recommend Spare
	Six Month Maintenance Kit Includes air intake filter, compressor muffler, and humidity sensor.	P011910	✓ (2)
	8,000 Hour Maintenance Kit Includes heatless dryer maintenance kit and compressor maintenance kit.	P012252	✓ (1)
	Universal Rack Mounting Kit Includes mounting brackets and hardware for 19" or 23" racks.	P011674	
	Wall Mounting Kit Includes mounting brackets and hardware.	P011773	
	Cycle Kit Allows multiple dryers to be cycled.	P08033W	
	Cycle Kit Interface Kit	P012341	

11.5 Ordering Parts from PUREGAS



IMPORTANT!

Instruction for the replacement of individual listed components goes beyond the scope of this User's Guide and will not be covered. Please refer to the information included with the specific replacement part for this instruction.

Once you have identified your required parts and accessories, contact the PUREGAS Inside Sales / Service department to order:

(800) 521-5351 (**option 2**)

Fax – (303) 657-2205

sales@puregas.com

parts@puregas.com

12. Service & Repair

Only PUREGAS can offer factory direct rebuilds backed by a 6 month factory warranty.

- 2 week turnaround time
- Estimates available upon request
- Minimum service charge fee applies

12.1 Services Offered

- **Piston Compressor Rebuild**
 - Replace motor bearings, piston rod assemblies, and install a complete compressor maintenance kit.
 - Test air flow, air pressure, and electrical performance
- **Heatless Dryer Rebuild**
 - Replace desiccant, o-rings, check valves, springs, and complete solenoid assembly
 - Test proper component operation
- **Desiccant Tower Repack**
 - Clean out tower and replace desiccant, filter, and o-ring
- **Circuit Board Repair** (Limited to current model boards only)
- **Complete Dryer Repair**

12.2 Initiating a Service Transaction

- Contact our Parts & Service Department at **1-800-521-5351 (option 3)** to obtain a Return Authorization (RA) number.
- Carefully package the item(s) to be returned.
- Mark the Return Authorization (RA) number on the outside of the shipping container.
- Include the main address and phone number of the individual to contact for related inquiry and follow-up information.
- Include the purchase order number.

13. Troubleshooting Your Dryer

13.1 Before You Call PUREGAS

PLEASE READ THIS SECTION FIRST. It is important that you use the following sections in order to diagnose and attempt to fix the problem with your air dryer before placing a call to PUREGAS Technical Support.

This troubleshooting guide is intended to simplify the isolation of problems, present possible causes, provide test procedures for verification, and suggest corrective actions to restore the air dryer back to normal operation. Each section begins with the most likely cause(s) of the issue. Otherwise, they start from the simplest possibilities and progress to more complicated ones.

This troubleshooting guide is designed to be easy to follow and very effective when used properly. It is suggested to always start at the beginning of the specific problem section and continue in sequence, following the procedures indicated.

13.2 Safety & Warning Information



WARNING!

For your safety, all the information in this User's Guide must be followed to minimize the risk of electrical shock, and prevent property damage or personal injury.



WARNING!

Internal surfaces may be hot. Use care when coming into contact with internal components as there is a potential for some of these components to become hot when in operation or standby.



WARNING!

Extreme care should be exercised to avoid contact with live electrical circuits. Many procedures performed during installation, operation, testing, and maintenance of this air dryer require the equipment to be running, creating a situation for potential electrical shock. It is highly recommended that you remove all jewelry before performing any procedures.



CAUTION!

Depressurizing the air dryer may be necessary before performing certain procedures. **NEVER** remove pressure sensing tubes from the Control Board without depressurizing the air dryer first, or **damage to the Control Board will occur.**



IMPORTANT!

Performing procedures not described in this User's Guide or installing components not supplied by PUREGAS is **NOT RECOMMENDED AND MAY VOID THE WARRANTY.**



CAUTION!

Do not test the Humidity Sensor with an ohm meter or apply any DC voltage. This will render the Humidity Sensor defective.

13.3 Air Dryer Won't Power ON

Possible Cause	Check	Corrective Action
POWER Switch in OFF position	Verify POWER switch is in the ON position (section 8.3)	Turn POWER switch to the ON position (section 8.3)
No incoming voltage to air dryer	Measure incoming voltage (section 9.4)	Troubleshoot facility power supply to air dryer

13.4 Display Screen Not Functioning

Possible Cause	Check	Corrective Action
Dryer experienced a power spike		Power the air dryer OFF for 15+ seconds. Power the air dryer ON .
Ribbon cable disconnected	Verify ribbon cable from the decal is connected at the display board	Reconnect the ribbon cable properly.

13.5 High Outlet Pressure Alarm

Possible Cause	Check	Corrective Action
Outlet Pressure set too high	Verify Outlet Pressure (OUTP) reading (section 8.4.5.1)	Adjust Outlet Pressure Regulator (section 8.11)
High Outlet Pressure Alarm set point too low	Verify High Outlet Pressure Alarm set point (section 8.6.2)	Raise High Outlet Pressure Alarm set point (section 8.6.2)

13.6 Can't Create a High Pressure Alarm

Possible Cause	Check	Corrective Action
Defective Outlet Pressure Regulator	Verify that the Outlet Pressure Regulator can be adjusted (section 8.11)	Replace Outlet Pressure Regulator if unable to adjust pressure (section 11.2)
High Outlet Pressure Alarm set point higher than default setting	Verify High Outlet Pressure Alarm set point (section 8.6.2.1)	Adjust Outlet Pressure Regulator so that Outlet Pressure (OUTP) reading climbs over verified set point (section 9.14)
Defective Control Board	Verify that the Outlet Pressure (OUTP) reading is higher than the High Outlet Pressure Alarm set point (above)	Replace Control Board (section 11.2) if Outlet Pressure (OUTP) reading is over verified High Outlet Pressure Alarm set point for more than 1 minute and fails to create an alarm.

13.7 Low Outlet Pressure Alarm

Possible Cause	Check	Corrective Action
Outlet Pressure set too low	Verify Outlet Pressure (OUTP) reading (section 8.4.5.1)	Adjust Outlet Pressure Regulator (section 8.11)
High Flow condition	Verify Flow Rate (FLOW) reading is not higher than expected (section 8.4.5.2)	Troubleshoot High Flow condition (section 13.11)
Low Outlet Pressure Alarm set point too high	Verify Low Outlet Pressure Alarm set point (section 8.6.3)	Lower the Low Outlet Pressure Alarm set point (section 8.6.3)
Leak in the air system	With no outlet flow, test fittings and hoses for leaks (section 9.16)	Tighten any loose connections as required

13.8 Can't Create a Low Pressure Alarm

Possible Cause	Check	Corrective Action
Defective Outlet Pressure Regulator	Verify that the Outlet Pressure Regulator can be adjusted (section 8.11)	Replace Outlet Pressure Regulator if unable to adjust pressure (section 11.2)
Low Outlet Pressure Alarm set point lower than default setting	Verify Low Outlet Pressure Alarm set point (section 8.6.3.1)	Adjust Outlet Pressure Regulator so that Outlet Pressure (OUTP) reading drops below verified set point (section 9.15)
Defective Control Board	Verify that the Outlet Pressure (OUTP) reading is lower than the Low Outlet Pressure Alarm set point (above)	Replace Control Board (section 11.2) if Outlet Pressure (OUTP) reading is under verified Low Outlet Pressure Alarm set point for more than 1 minute and fails to create an alarm.

13.9 High Humidity



CAUTION!

Do not test the Humidity Sensor with an ohm meter or apply any DC voltage. This will render the Humidity Sensor defective.

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure (section 8.9)	Adjust System Pressure (section 8.9)
Low Flow Rate	Verify Flow Rate (FLOW) reading is low (section 8.4.5.2)	Increase flow by creating an artificial leak outside of the air dryer.
High Humidity Alarm set point too low	Verify High Humidity Alarm set point (section 8.6.4) If Flow Rate is low, allowing a higher alarm set point (up to 10%) will allow dryer to run within acceptable levels.	Raise High Humidity Alarm set point (section 8.6.4) Over 10% not recommended
Defective Humidity Sensor	Perform the Testing Humidity Alarm and System Shutdown test (section 9.13)	Troubleshoot <i>Can't Create a High Humidity Alarm / Shutdown</i> condition (section 13.10)
Heatless Dryer not cycling between towers	Verify consistent Heatless Dryer cycling (section 9.6)	Troubleshoot <i>Inconsistent Heatless Dryer Cycling</i> condition (section 13.13)
Defective Control Board	Unplug Humidity Sensor from Control Board (see section 11.1 for Board location) Humidity reading should drop to 0%	If Humidity did not drop to 0%, replace Control Board (section 11.2)

13.10 Can't Create a High Humidity Alarm / Shutdown

These troubleshooting steps assume that the Humidity Element is removed from the Humidity Block during the *Testing Humidity Alarm and System Shutdown* (section 9.13) procedures.

Possible Cause	Check	Corrective Action
Humidity Sensor Cable disconnected	Verify that Humidity Sensor cable is connected to the Control Board	Connect Humidity Sensor cable
Defective Humidity Sensor	Verify that Humidity reading fails to climb higher than 15% or creates sporadic readings	Replace Humidity Sensor (section 11.1)
Defective Control Board	Verify that Humidity reading is over 15% for more than 1 minute	Replace Control Board if no alarm is created and system does not shut down (section 11.2)

13.11 High Flow Rate Alarm

Possible Cause	Check	Corrective Action
Air leak in downstream cable outside of dryer	Verify Flow Rate (FLOW) reading is not higher than expected (section 8.4.5.2)	Fix downstream problem
Air leak inside of dryer	Test fittings and hoses for leaks (section 9.16)	Reconnect or replace bad fitting / hose
High Flow Alarm set point too low	Verify High Flow Alarm set point (section 8.6.1)	Raise High Flow Alarm set point (section 8.6.1)

13.12 High Cabinet Temperature Alarm

Possible Cause	Check	Corrective Action
Fan Failure	Verify fan is running (section 9.9)	Check for loose fan wiring (section 14.1) Replace defective fan (section 11.1)
High Ambient Temperature	Verify temperature of dryer operating location. Recommended ambient temperature is 5°-30°C.	Lower the ambient temperature of the dryer's operating location

13.13 Inconsistent Heatless Dryer Cycling

Possible Cause	Check	Corrective Action
Defective Solenoid Valve	Measure voltage going to the Heatless Dryer Solenoid Valves (section 9.8)	If voltage IS present, replace Solenoid Valves included in the 8,000 Hour Maintenance Kit (section 11.4)
Defective Cycle Timer	Measure voltage going to the Heatless Dryer Solenoid Valves (section 9.8)	If voltage IS NOT present, replace the Cycle Timer (section 11.3)

13.14 Compressor Doesn't Operate

Possible Cause	Check	Corrective Action
System is in Shutdown state	On the Display Panel, verify that the system is in SHUTDOWN state	Press the RESET Button
Defective compressor	Measure compressor voltage (section 9.3)	If voltage is good, replace compressor (section 11.2) or send it in for repair (section 12.)
Defective control board	Measure compressor voltage (section 9.3)	If measurements are incorrect, replace control board (section 11.2)

13.15 Compressor Won't Build Pressure

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure (section 8.9)	Adjust System Pressure (section 8.9)
Defective Unloader Valve	Test Unloader Valve operation (section 9.7) If this is continuously flowing high amounts of air, the Unloader Valve is defective.	Replace Unloader Valve (section 11.2)
Leak in air system	Check all hoses and fittings between compressor and Air Tank for air leaks (section 9.16)	Connect, tighten, or replace leaking component

13.16 Compressor Excessive AMP Draw

Possible Cause	Check	Corrective Action
Restriction in air line	Remove Discharge Hose from compressor (hose to the heatless dryer) Re-measure Compressor AMP Draw (section 9.2)	If measurement is below the recommended amps, trace hoses from compressor to Unloader Valve looking for restrictions or kinks
Compressor failing	Remove Discharge Hose from compressor (hose to the heatless dryer) Re-measure Compressor AMP Draw (section 9.2)	If measurement is still above the recommended amps, replace the compressor (section 11.2) or send it in for repair (section 12.)

13.17 High Duty Cycle Alarm

Possible Cause	Check	Corrective Action
Low System Pressure	Verify System Pressure (section 8.9)	Adjust System Pressure (section 8.9)
High Flow condition	Verify Flow Rate (FLOW) reading is not higher than expected (section 8.4.5.2)	Troubleshoot High Flow condition (section 13.11)
Defective Unloader Valve	Test Unloader Valve operation (section 9.7) If this is continuously flowing high amounts of air, the Unloader Valve is defective.	Replace Unloader Valve (section 11.2)
Defective Heatless Dryer Solenoid Valve	Verify consistent Heatless Dryer cycling (section 9.6) If either side is continuously flowing high amounts of air, the Solenoid Valve is defective.	Replace Solenoid Valves included in the 8,000 Hour Maintenance Kit (section 11.3)
Defective control board	Measure voltages at control board (section 9.3)	If measurements are incorrect, replace control board (section 11.1)

13.18 Can't Create a High Duty Cycle Alarm

Possible Cause	Check	Corrective Action
High Duty Cycle Alarm set point too high	Verify High Duty Cycle Alarm set point (section 8.6.5)	Retest the High Duty Cycle Alarm, allowing the compressor to run more often than it is off (section 9.12)
Defective Control Board	Verify that the compressor has run more than the verified High Duty Cycle Alarm set point (above)	Replace Control Board (section 11.2) if the compressor runs more than the verified High Duty Cycle Alarm set point and fails to create an alarm.

13.19 Compressor Rapid ON/OFF Cycling

Possible Cause	Check	Corrective Action
Defective control board	Measure voltages at control board (section 9.3)	If measurements are incorrect, replace control board (section 11.2)

13.20 Contacting PUREGAS Technical Support

Please read the *Before You Call PUREGAS* section (13.1)

Once you have exhausted all of the potential problems and solutions covered in the *Troubleshooting Your Dryer* section, and you still require further assistance to correct a problem, contact PUREGAS Technical Support:

(800) 521-5351 (option 1)

Have the following information available:

Trouble Ticket # (if following-up on a previous call):_____

Technician Name:_____ **Phone #:**_____


Model #:_____ **Serial #:**_____

Company Name:_____ **Location Name:**_____

City:_____ **State:**_____

14. Appendix

14.1 Wiring Diagram

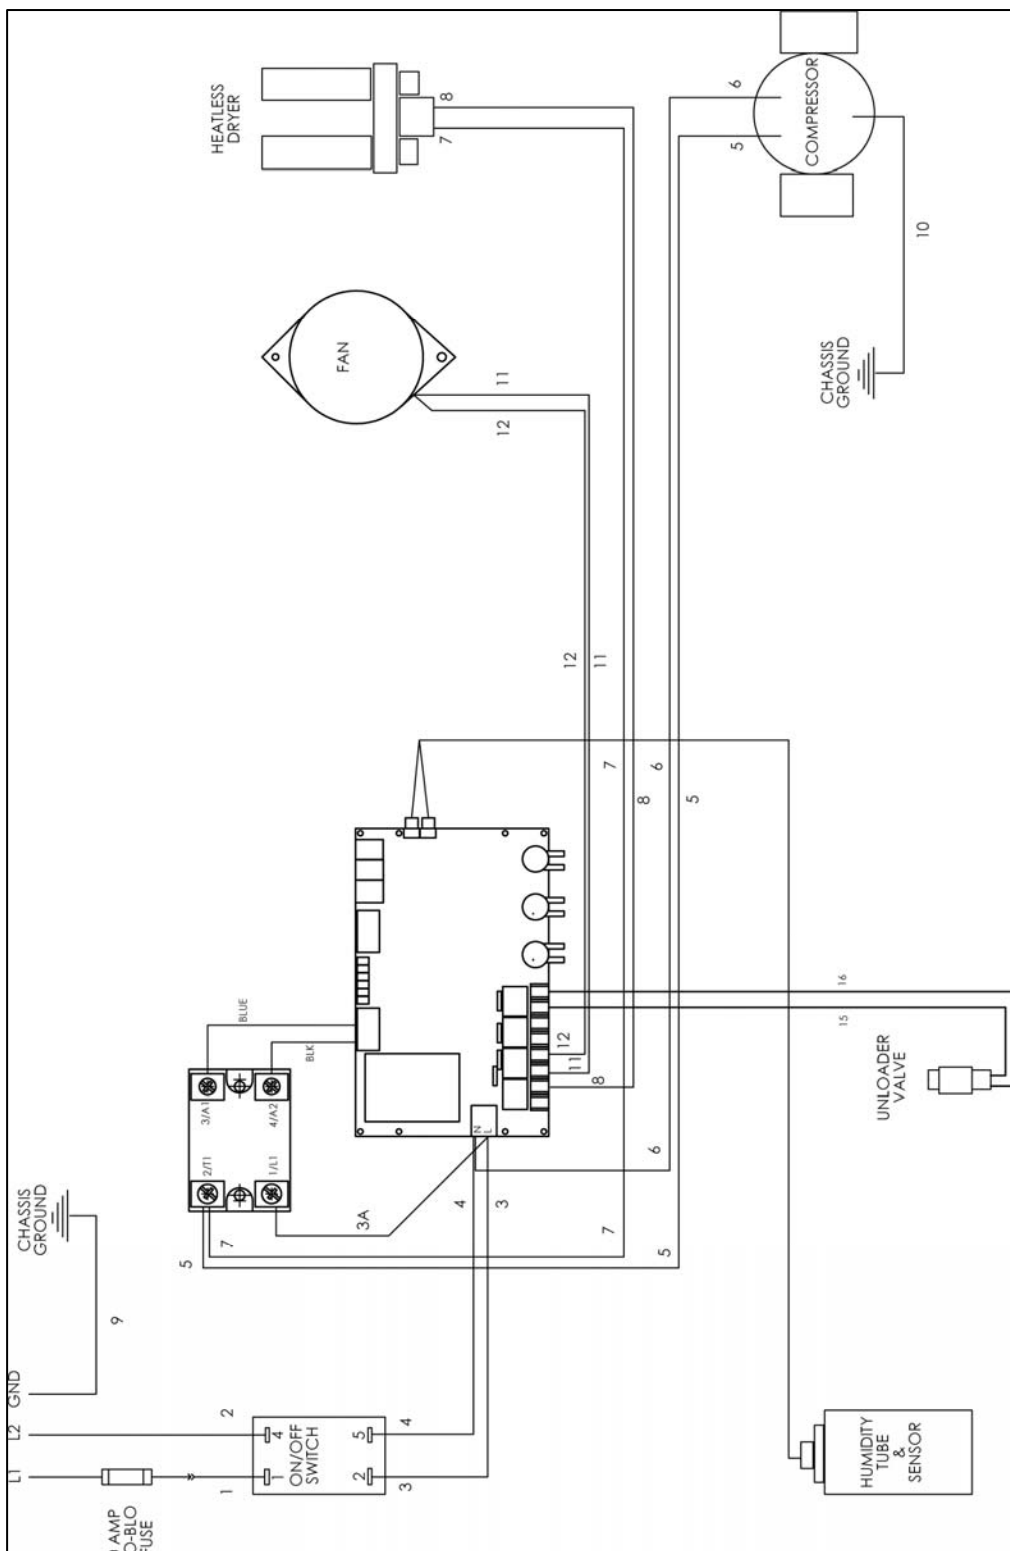

14.2 Set Point Limits and Defaults

14.2.1 System Adjustments

Description	Minimum Value	Maximum Value	Default Value	Unit of Measurement
System Pressure			551.6	KPa
Static Pressure			117	KPa
Outlet Pressure (LP models)	13.8 (2.07)	103.4 (51.71)		KPa
Alarm Delay	OFF	ON	ON	
Startup Delay	0	10	0	Seconds

14.2.2 Alarm Set Points

Description	Minimum Value	Maximum Value	Default Value	Unit of Measurement	Shutdown
High Flow Alarm	0	57	42	SCMD	
High Outlet Pressure Alarm (LP models)	3.6 (2.14)	138.0 (51.71)	83 (51.71)	KPa	
Low Outlet Pressure Alarm (LP models)	3.5 (2.07)	137.9 (51.64)	45 (2.07)	KPa	
High Humidity Alarm	3	15	10	%	YES
High Duty Cycle Alarm	0	99	70	%	
High Cabinet Temperature Alarm			48.8	Deg C	YES
Compressor Total Run Time Alarm			8000	Hours	

14.2.3 System Operations

Description	ON Value	OFF Value	Default Value	Unit of Measurement
Compressor	345	621		KPa
Fan	32	27		Deg C

14.3 SNMP Parameters

Device Configuration Information

Device ID	Alphanumeric (Defined by Customer)
Device Model	Alphanumeric (Factory Preset)
Device Firmware Version	Numeric (Factory Preset)
Current Date/Time	Numeric (mm/dd/yy hh:mm)
IP Address	Numeric (xxx.xxx.xxx.xxx)
Subnet Mask	Numeric (xxx.xxx.xxx.xxx)
Gateway Address	Numeric (xxx.xxx.xxx.xxx)
SNMP Trap Server Address	Numeric (xxx.xxx.xxx.xxx)

Status Readings (Read-Only)

Outlet Pressure Reading	Numeric (KPa)
Tank Pressure Reading	Numeric (KPa)
Humidity Reading	Numeric (%)
Flow Reading	Numeric (SCMD)
Cabinet Temperature Reading	Numeric (DEG C)
Compressor Total Run Time Reading	Numeric (Hours)
Duty Cycle Reading	Numeric (%)
System Status	ON / SHUTDOWN
Compressor Status	ON / OFF
Fan Status	ON / OFF
Heater Status (Outdoor Unit Only)	ON / OFF

Alarm Readings (Read-Only)

High Flow Alarm	OK / Alarm
High Outlet Pressure Alarm	OK / Alarm
Low Outlet Pressure Alarm	OK / Alarm
High Humidity Alarm	OK / Alarm
High Cabinet Temperature Alarm	OK / Alarm
High Duty Cycle Alarm	OK / Alarm
Maintenance Required Alarm	OK / Alarm
Total Alarm	OK / Alarm

Configuration Settings (Read-Write)

High Flow Alarm Threshold	Numeric (SCMD)
High Outlet Pressure Alarm Threshold	Numeric (KPa)
Low Outlet Pressure Alarm Threshold	Numeric (KPa)
High Humidity Alarm Threshold	Numeric (%)
High Duty Cycle Alarm Threshold	Numeric (%)
Reset Compressor Total Run Time Reading	Numeric (Hours)
Start Up Delay Time	Numeric (Seconds)
Alarm Delay	ON / OFF

Alarm Traps Sent to SNMP Server

High Flow
High Outlet Pressure
Low Outlet Pressure
High Humidity
High Cabinet Temperature
High Duty Cycle
Maintenance Required
Total Alarm

15. Limited Warranty Agreement

PUREGAS products carry a one (1) year warranty against defective workmanship and material. This period starts at date of shipment. Not included are the components subject to normal replacement during a year's operating time.

No claims for labor in replacing defective parts or for consequential damages will be allowed. Replacement parts will be invoiced in the regular way, with invoices subject to adjustment after the parts claimed defective are examined at our factory. In addition, no material or parts will be accepted at our factory for in-warranty repairs or credit without previous authorization from PUREGAS.

Responsibility for damages incurred in transit will be borne by the user and the user in turn should file any damage claim against the carrier. All warranty items are F.O.B. Broomfield, Colorado. Freight charges are the responsibility of the user.

This warranty shall not apply to any PUREGAS product which shall have been repaired or altered in any way by anyone other than PUREGAS or authorized personnel so as to affect, in our judgment, its proper functioning or reliability, neither will it apply to any product which has been subject to misuse, negligence, or accident. The installation of unauthorized non PUREGAS parts will void the warranty on those PUREGAS products.

Registration Reminder

If you haven't already done so, please take a moment to register your PUREGAS P1500W2 Series Air Dryer. **Registering is necessary to activate this Limited Warranty on your product.** Once you register, you are eligible to receive free technical support, as well as updates concerning your PUREGAS products.

See Section 7. for details on Registering Your Dryer.

16. Contacting PUREGAS

16.1 General

PUREGAS, LLC
226A Commerce Street
Broomfield, Colorado 80020

(800) 521-5351
(303) 427-3700
Fax – (303) 657-2233

info@puregas.com
www.puregas.com

16.2 Sales

(800) 521-5351 (**option 2**)
Fax – (303) 657-2205

sales@puregas.com
parts@puregas.com

16.3 Service

(800) 521-5351 (**option 3**)
Fax – (303) 657-2205

16.4 Technical Support

(800) 521-5351 (**option 1**)

DON'T FORGET TO REGISTER YOUR DRYER!

See Section 7. for details on Registering Your Dryer.

[illegible]